
Thermoelectric Temperature Control Unit Model 2021

User Manual

This publication is subject to replacement by a later edition. To determine whether a later edition exists, or to request copies of publications, contact

Noah Precision, Inc

6389 San Ignacio Avenue

San Jose, CA 95119

Telephone: 408-281-7772

FAX: 408-281-7797

All rights reserved on this document. No part may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without permission from Noah Precision.

This document is provided without warranty of any kind, either implied or expressed, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Noah Precision may make improvements or changes in the product(s) or program(s) described in this documentation at any time.

Lexan is a registered trademark of General Electric.

Molex is a registered trademark of Molex Company.

Teflon is a registered trademark of DuPont.

Contents

1 Overview

Operating Principles	1-1
Controller Interface	1-3
Description	1-4
Displays	1-7
Lockout-Tagout	1-9

2 Installation

Hook-up	2-1
Hook-up Procedure	2-2
System Start-up	2-4
User Setup	2-6
Factory Setup	2-15
Com-Link Start-up	2-20
RS422 Interface	2-22
System Shut-down	2-22

3 Operation

Turning the System ON	3-1
Process Operation	3-2
Controller Keys	3-4
Modes of Operation	3-6
AutoTune	3-7
Tuning the PID Controller	3-8
Turning the System OFF	3-14

4 Alarms

Types of Alarms	4-2
Alarm Descriptions	4-4
Information Only Alarms	4-5
Output Deactivation Alarms	4-9
Master Relay Alarms	4-15

5 Optional Equipment

Remote Display	5-1
Digital Flow Meter	5-2
Liquid Pressure By-Pass Option	5-3
Communication Interface	5-5
10 mV/ °C Communications Interface	5-5
100 mV/ °C Communications Interface	5-6
10 mV/ °C Analog Interface Special	5-9
RS-422 Communication Interface	5-10

6 Troubleshooting

LEDs	6-1
Master Relay Safety Switches	6-2
Fuses	6-3
Standard Temperature Inputs	6-3
Open Collector Transistor Inputs	6-4
System Outputs	6-4
Back Door	6-6
AutoTuning	6-6
Troubleshooting Guide	6-7

7 Maintenance

Process Fluid	7-2
Pump/Motor	7-2

Appendices

- A Engineering Specifications for the Model 2021**
- B Model 2021 Major Components**
- C Engineering Specifications for the 962-JG Controller**
- D Process Plumbing**
- E Electrical Circuitry**
- F Circuit Markings on the 962-JG Board**
- G Acronyms**

Figures

1-1	Peltier Effect	1-2
1-2	The 962-JG Controller Interface	1-3
1-3	Model 2021	1-5
1-4	Major Components of the Model 2021	1-6
1-5	Initial Factory Display	1-7
1-6	Example IDLE Mode Display	1-8
1-7	Example ACTIVE Mode Display	1-8
1-8	Heater Fuse Alarm Display	1-8
1-9	Cleared Heater Fuse Alarm Display	1-8
1-10	2021 Lockout-Tagout Feature	1-9
2-1	Back View of the Model 2021	2-2
2-2	Model 2021 Reservoir	2-3
2-3	Location of Power Switch	2-5
2-4	Controller Interface	2-6
2-5	Fill Monitor 3-Level Switch Displays	2-14
3-1	Circulation of Process Fluid	3-2
3-2	Controller Key Locations	3-3
3-3	Temperature Oscillations	3-10
3-4	Oscillation Time	3-11
3-5	Final Temperature Deviation	3-11
3-6	Nomogram I	3-12
3-7	Nomogram II	3-13
3-8	Nomogram III	3-13
4-1	962-JG DIP Switch	4-9

Figures (con't)

5-1	Remote Port	5-2
5-2	Liquid Pressure By-Pass	5-4
5-3	10 mV/ °C Analog Signal Communication Port	5-6
5-4	100 mV/ °C Analog Signal Communication Port	5-8
5-5	Transistor Output	5-9
5-6	RS422 Communication Port	5-12
D-1	Liquid Pressure By-Pass Option	D-1
D-2	Facility Plumbing	D-2
D-3	Process Plumbing	D-3
E-1	Electrical Panel Layout	E-3 & 4
E-2	Output Wiring	E-5 & 6
E-3	EMO Circuit Wiring	E-7
E-4	Solenoid/flow Facility Wiring	E-8
E-5	2021 Wiring	E-9
E-6	DC Output Wiring	E-10
E-7	RS-422 Interface Wiring	E-11
E-8	962-LE Circuit Wiring	E-12
E-9	Remote Display Wiring Diagram	E-13
E-10	RS422 Board	E-14

Tables

2-1	User Setup Parameters	2-8
2-2	Factory Setup Parameters	2-16
4-1	Information Only Alarms	4-3
4-2	Output Deactivation Alarms	4-3
4-3	Master Relay Alarms	4-4

Preface

Manual Objectives

This manual describes the installation, operation and maintenance of the Model 2021 Temperature Control Unit.

Intended Audience

The user should be familiar with basic electronics and safety procedures and guidelines. This manual is written for those who must install, operate and maintain the Model 2021 Temperature Control Unit. This audience includes support technicians, manufacturing, QA, and field service.

Manual Organization

Section 1 Overview

Presents an overview of the thermoelectric control unit. Explains operating principles and identifies major components. Describes the user interface and provides examples of display messages.

Section 2 Installation

Provides step by step instructions for physical hook-up, controller setup and programming, system start-up, and communication linkages. Also explains shut-down procedures.

Section 3 Operation

Explains how to turn the system on, process operation, operation modes including all controller key functions, and how to turn the system off.

Sectin 4 Alarms

Describes various alarm conditions and the ramifications of each alarm. Provides detailed instructions for clearing and silencing individual alarms.

Section 5 Optional Equipment

Describes optionalequipmentavailableforspecialprocessrequirements.

Section 6 Troubleshooting

Discusses problems that might occur with the Model 2021. Also contains a troubleshooting guide for easy reference.

Section 7 Maintenance

Explains preventive maintenance procedures. Provides time tables for changing coolant and moving parts.

Appendix A Engineering Specifications for the Model 2021

Specifies sizes, ranges and capacities for the Model 2021 including precautions.

Appendix B Model 2021 Major Components

Lists major components by description and part number.

Appendix C Engineering Specifications for the 962-JG Controller

Describes the specifications for the Model 2021 user interface.

Appendix D Process Plumbing

Diagrams the process plumbing flow.

Appendix E Electrical Circuitry

Provides schematics of the electrical panel and controller circuitry including EMO circuitry.

Appendix F Circuit Markings on the 962-JG Board

Explains board layout and markings including switches and contacts.

Appendix G Acronyms


Lists the acronyms used throughout the manual.

Related Documents

RS422 Communication Supplement (Part Number 060-00704)

Safeguards

This manual contains certain information labeled with danger, warning and caution messages. Read all information highlighted in this manner carefully.

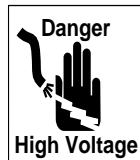

Danger

A Danger message alerts the user of a possibility of a fatal injury. For example, high voltage.



Warning

A Warning message alerts the user of a possibility of serious injury.



Caution

A Caution message alerts the user of a possibility of equipment damage.



Note

A Note alerts the user of the possibility of minor complications.

Operate the Model 2021 only with the type of power source indicated on the marking label (208 VAC, 60 Hz, 3-phase Delta, 30 amp).

An Emergency Machine Off (EMO) button is provided on the front of the controller interface.

Limited Warranty

Noah Precision warrants its products against defects in materials and workmanship under normal use and service for the period of warranty from the date of delivery.


If a product does not operate as warranted during the warranty period, Noah Precision shall, at its expense, correct any such defect by repairing the defective product or part or, at its option, by delivering to the customer an equivalent product or part to replace the defective item. All products that are replaced become the property of Noah Precision. Replacement products may be new or reconditioned. Any replaced or repaired product or part is guaranteed for the remainder of the initial warranty period.

Noah Precision shall not be liable under this warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by the customer's or any third person's misuse, neglect, improper installation or testing, unauthorized attempts to repair, or any other cause beyond the range of the intended use, or by accident, fire, lightning, or other hazard.

Limitation of Liability: In no event, shall Noah Precision be liable for incidental, consequential, indirect, special, or punitive damages of any kind, or for loss of revenue, loss of business, or other financial loss arising out of or in connection with the sale, installation, maintenance, use, performance, failure, or interruption of its products, even if Noah Precision or its authorized reseller has been advised of the possibility of such damages.

Registration

All Noah Precision products include the model number and the serial number on the nameplate. This nameplate is found on back plate of the unit adjacent to the power cord.

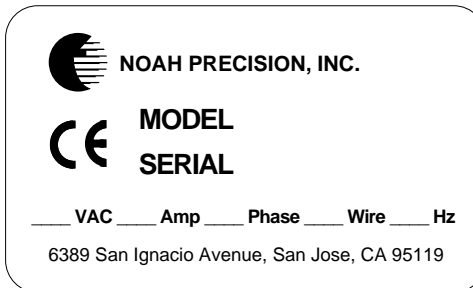

Please use the information from the nameplate to complete and return the registration card immediately

Unpacking and Damage

Noah Precision, Inc. inspects each product thoroughly before packaging. Safe delivery is the responsibility of the carrier. Please inspect the unit for damage and submit claims for loss or damage to the carrier itself.


Visible damage should be noted on the freight bill. Be sure the carrier's agent signs the freight bill acknowledging the damage. The carrier has the required forms for submitting damage claims.

Crates are reusable. Please do not destroy.



Warning

Heavy load. Unit weighs 170 lbs.

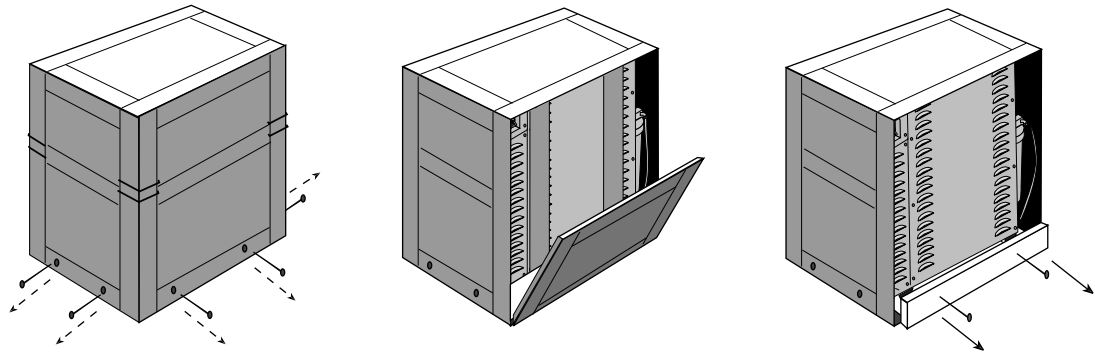

When unpacking, do NOT turn crates on their sides.

1. Unscrew the bolts at the bottom of the crate.
2. Remove the top assembly.
3. Unscrew the bolts on the side of the Temperature Control Unit (TCU).



Caution

Do NOT lift by the parts that protrude from the back of the unit.

If there are damages that are not apparent until after unpacking the unit, file a written request for inspection by the carrier's agent **at once**. There is usually a fifteen (15) day time limit for concealed damage claims.

Contact Noah Precision to receive a Return Material Authorization (RMA) BEFORE returning the unit to the factory.

Save all packaging materials and be sure to include all name plate data including part number and serial number when communicating with the Noah Precision factory.



Overview

The Model 2021 Temperature Control Unit (TCU) incorporates solid state thermoelectric technology which completely eliminates the use of Ozone Depleting Chemicals (ODCs) or toxic Freon substitutes.

Specifically developed for semiconductor wafer processing equipment, its small footprint makes it ideal for cleanroom applications.

Designed and tested for reliable, efficient and quiet operation, the Model 2021 requires minimal maintenance and service to provide a continuous supply of cooling fluid at a constant temperature. It comes equipped with pump, controller, power supply unit and cooling reservoir.

Operating Principles

The Model 2021 operates on the principle of thermoelectric cooling based on the Peltier Effect.

Thermoelectric (TE) devices are small solid-state heat pumps. Their advantages include small space requirements and high reliability. A single-stage thermoelectric cooling unit is a matrix of thermoelectric couples, connected in series electrically, and connected in parallel thermally. The number of couples depends on the cooling requirement.

1 Overview

Each couple consists of p -type and n -type semiconductor pillars positioned between two ceramic plates. These plates provide a rigid mounting structure and electrical insulation between the heat sink and the process being cooled. Cooling capacity is proportional to the supply current and the number of couples.

Peltier discovered that heat is released or absorbed when two dissimilar materials that conduct electrical current are joined. A positive voltage applied to the n -type material drives electrons from the p -type to the n-type material and back to the voltage supply. The temperature on the cold side decreases as heat is absorbed. The heat is then conducted through the couple to the hot side to dissipate through a heat sink. The heat dissipated is the sum of the heat removed from the cold side and the heat generated by the thermoelectric input power. Reversing the voltage polarity changes the hot side of the couple to the cold side.

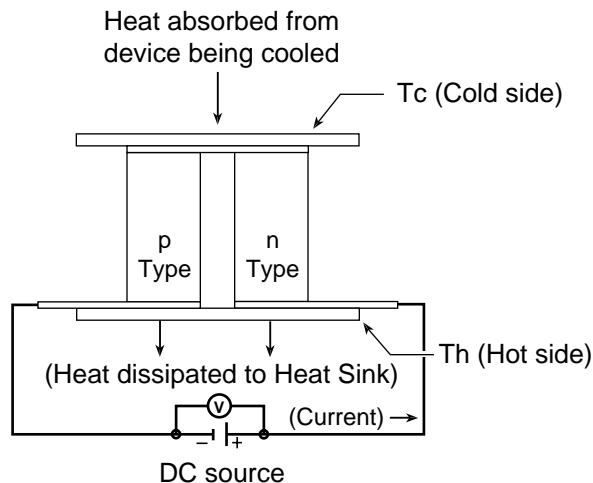


Figure 1 - 1 Peltier Effect

The applications of this principle to thermoelectric cooling enables the temperature control unit to cool process fluids and maintain required temperatures with high reliability and low maintenance.

Controller Interface

A microprocessor based controller, Model 962-JG, is the user interface and control for the Model 2021 cooling system.

It monitors temperature with a J-type thermocouple sensor or an RTD sensor depending on the application. An RTD sensor is more commonly used. The control loop is a standard three mode Proportional Integral Derivative control algorithm (PID control scheme) with anti-reset windup. The 962-JG employs an autotune routine to determine three mode control parameters: Proportional band, Reset and Rate.

Status, alarm and diagnostic functions are monitored and reported through both an audio buzzer and a 2 x 20 backlighted LCD display. The LCD also displays set-up parameters. A six-key tactile keypad provides for set-up data and user adjustments. A short beep acknowledges valid inputs and a razz tone sounds if the input is invalid. See Figure 1-2.

Two additional LEDs on the face panel indicate the immediate status of the heating and cooling outputs. The audio buzzer also sounds if an alarm message appears.

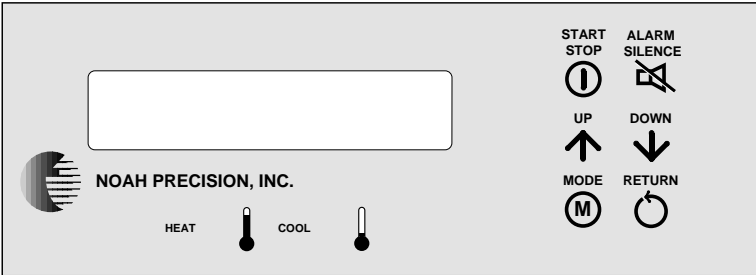


Figure 1 - 2 The 962-JG Controller Interface

There are two circuit assemblies: the main board (located inside the system) and the display panel (962 controller interface). The main controller card is interconnected via a flat ribbon cable to the face panel that has the display, keypad and audio.

1 Overview

The 962-JG has six optically isolated solid state relay (SSR) outputs and twelve optically isolated user inputs. The master relay is controlled by the microprocessor but can also be turned off with four independent thermal snap switch inputs or by the Thermocouple High Limit input.

The redundant high limit temperature circuit uses a Type-J thermocouple sensor. Totally independent of the main microprocessor circuit, it has its own optional independent power supply.

The Model 2021 has a two-stage cooling routine. Each stage consists of one bank of thermoelectric modules, totaling two banks of modules.

The 962-JG controller calculates how many stages of thermoelectrics need to be activated at a given time. If the setpoint is considerably lower than the actual temperature, all banks go on with the proper stage delay until the temperature reaches the setpoint. The heater then cycles on and off to counteract the cooling. The controller calculates exactly how much cooling is needed. If the heater is on at least 88% of the time, it turns off a cooling stage. If the heater is on less than 12% and is above the setpoint, a cooling stage is added. The controller calculates the most efficient operating stage for a particular setpoint, thus minimizing overall energy consumption.

Description

The Model 2021 incorporates the following features:

- State-of-the-art microprocessor temperature controller
- Solid state thermoelectric cooling module
- High pressure turbine pump
- Independent DC power supply

Measuring just 31 inches long by 14 inches wide by 27 inches high, the Model 2021 provides continuous cooling with minimal space requirements. See Figure 1-3 for a frontal view of the Model 2021.

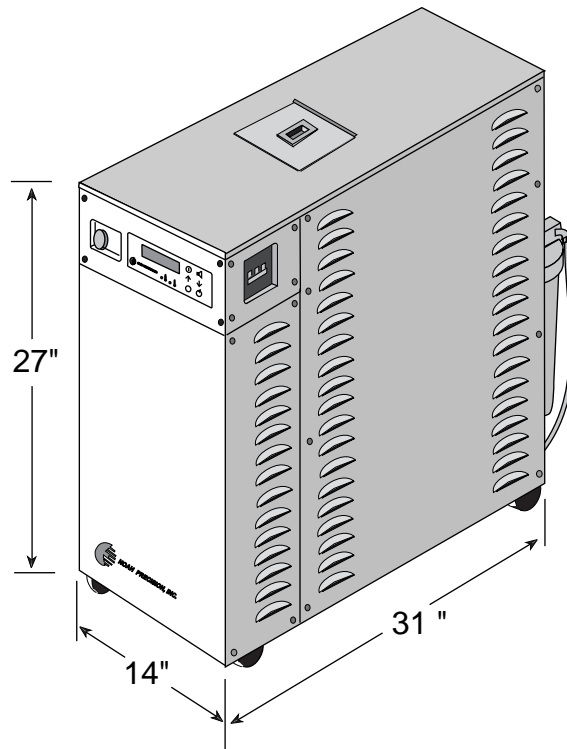


Figure 1 - 3 Model 2021

Constructed with a steel chassis, stainless steel cooling reservoirs and Buna-N plumbing, the Model 2021's tank capacity is 4.5 gallons. Temperature range is 0 °C to 90 °C.

The six-key tactile keypad located on the front panel allows user adjustments and system set-up. Directly below the message display window, two LEDs show the current status of the heating and cooling outputs.

Two 2000 watt immersion heating modules are mounted on top of the tank.

1 Overview

The power supply is a direct AC rectified to DC.

Figure 1-4 provides a diagram of major components. Unit specifications are listed in Appendix A and component parts are itemized by part number in Appendix B. Appendix C has the engineering specifications for the 962-JG controller.

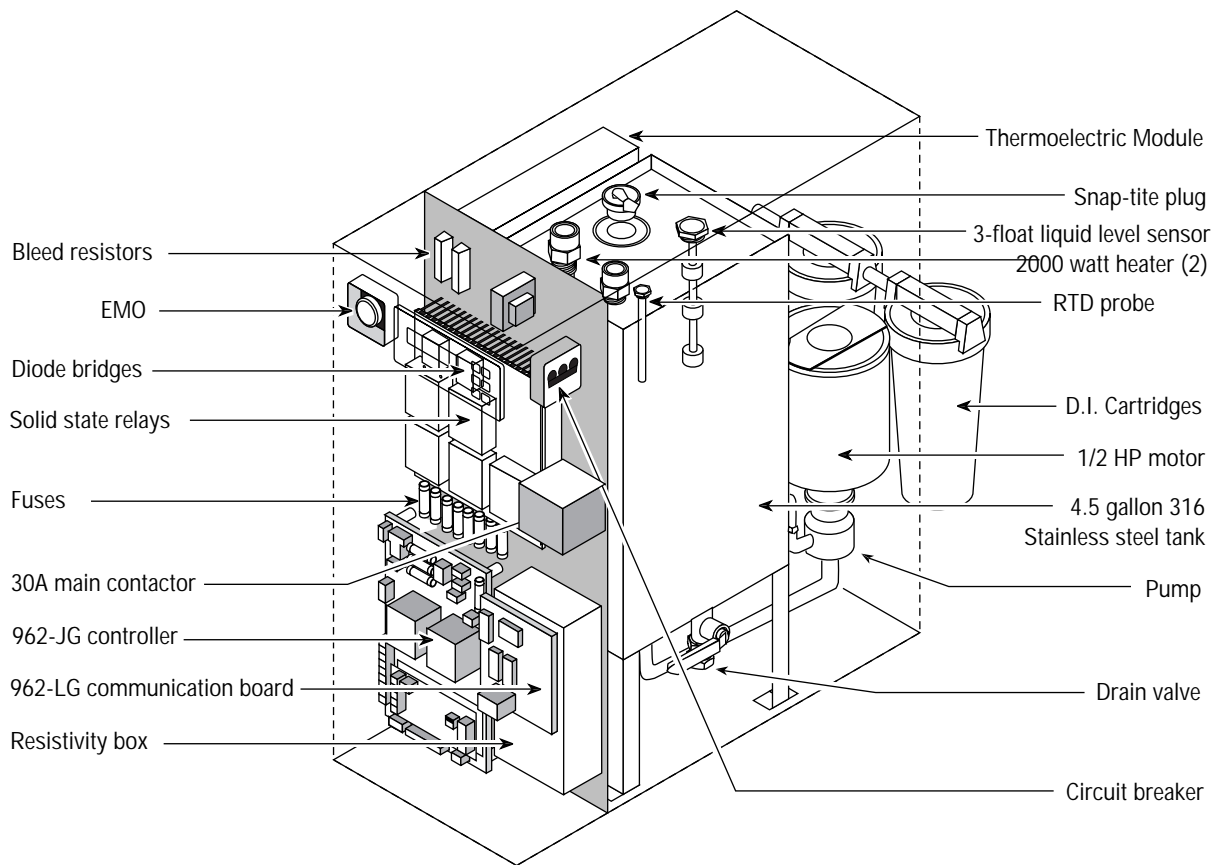


Figure 1 - 4 Major Components of the Model 2021

Displays

All programming and informational messages are displayed in the window on the front of the controller panel. There are four types of display messages: set-up, status, alarm and diagnostic messages. Each message contains two lines.

The **first line of the display** indicates the general mode of the system. The upper left corner indicates one of the five basic system control modes: ACTIVE, IDLE, ALARM, SETUP and AUTOTUNE. The upper right corner displays the temperature of the process water Out.

The **second line** displays the current setpoint of the system, the current resistivity value, or the current flow value. These options are selected by the UP and DOWN keys. A special scanning option causes these values to rotate continuously at a time interval programmed by the user.

The only time the display lines do not read this way is when the system is first turned on and the initial display from the factory appears. The factory screen identifies the model number of the system. This message lasts about 7 seconds while the system initializes and runs a complete battery of self-diagnostics. See Figure 1-5.


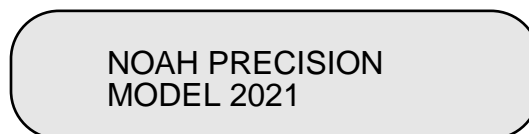


Figure 1 - 5 Initial Factory Display

1 Overview

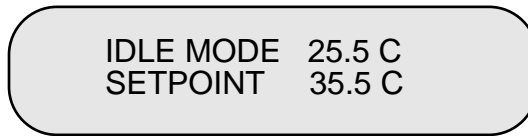

When the system has completed its diagnostics, the screen changes to read IDLE Mode and the setpoint. Figure 1-6 is an example of an IDLE Mode screen.

Figure 1 - 6 Example IDLE Mode Display

When the Start Key is pressed, the screen displays ACTIVE Mode, the temperature of the process water Out, and the setpoint. The ACTIVE Mode display remains until the user enters another function or an alarm condition occurs. See Figure 1-7.

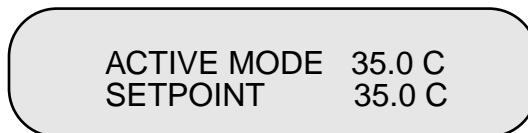


Figure 1 - 7 Example ACTIVE Mode Display

In case of an alarm, the top line of the display indicates the type of alarm. The second line indicates the status of the alarm. Figure 1-8 is an example of an active heater fuse alarm.

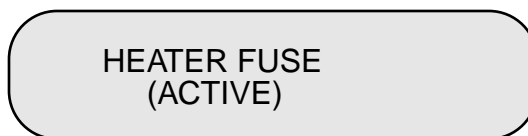


Figure 1 - 8 Heater Fuse Alarm Display

When an alarm has been cleared, the alarm display changes to indicate the cleared status. See Figure 1-9.

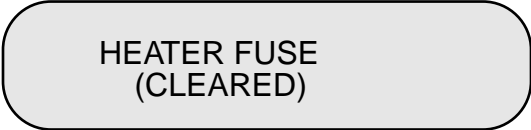


Figure 1 - 9 Cleared Heater Fuse Alarm Display

A cleared alarm screen remains until the user presses the Start Key. The display changes to ACTIVE Mode. If six seconds elapse before the Start Key is pressed, the system goes into IDLE Mode.

Lockout-Tagout

The Model 2020g incorporates a Lockout-Tagout safety feature to protect individuals during maintenance or service. When the system is turned off, a lock is inserted in the frame of the machine over the circuit breaker to prevent accidental power up. See Figure 1-10. A lockout tag shows who locked the system along with time and date.

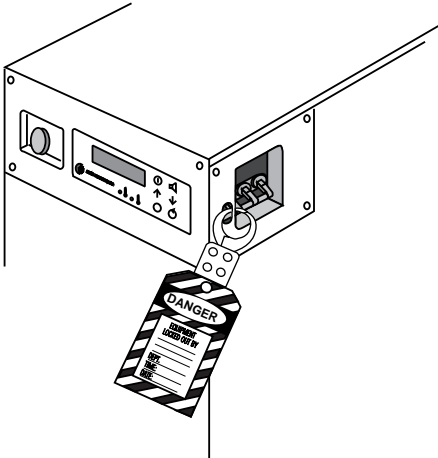


Figure 1 - 10 Model 2021 Lockout-Tagout Feature

1 Overview

Installation

Installing the Model 2021 takes about 30 minutes* including Hook-up, System start-up and Com-link start. The only items required are basic plumbing tools, deionized water/ethylene glycol and a power source.

AUTOTUNE requires an additional 15 to 60 minutes to execute.

Hook-up

Before beginning the installation, test the facility supply water.

- $\leq 20 \mu\text{m}$ filtered water
- Flow rate: minimum 3 gpm
- Temperature range: +10 to +25 °C
- Water pressure: 50 to 80 psi with minimum differential pressure of 30 psi.

Refer to Figure 2-1 on the following page for a back view of the Model 2021 and hook-up procedures.

* Assuming plumbing for both process and facility water are already in place.

2 Installation

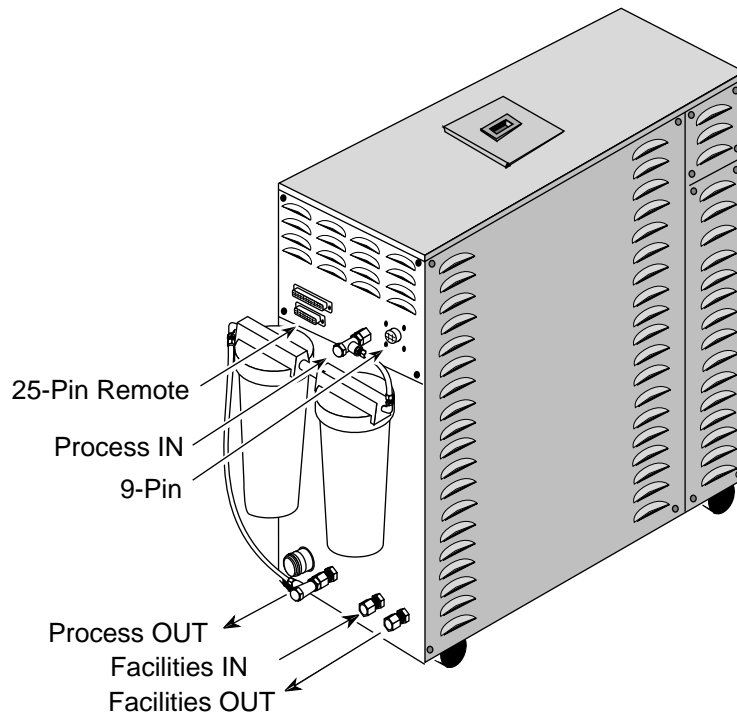


Figure 2 - 1 Back View of the Model 2021

Hook-up procedure

1. Check the DI cartridges. Tighten until snug (hand tight).
2. Connect the tubing for the **Process IN** fluid. Use 1/2 inch diameter tubing or equivalent. Located above the deionization cartridge. The Process IN is the return line of the TCU. Process fluid from the etcher/CVD goes to the TCU.
3. Connect the tubing for the **Process OUT** fluid. Use 1/2 inch diameter tubing or equivalent. Located to the right of the power cord plug. The Process OUT is the supply line of the TCU. Process fluid from the TCU goes to the etcher/CVD machine.

4. Connect the **Facility IN** port. Use 1/2 inch NPT tubing. Located next to the Process OUT port.
5. Connect the **Facility OUT** port. Use 1/2 inch NPT tubing. Located on the right side of the back of the unit.
6. Remove the left side panel of the Model 2021. Verify that the drain valve is off by checking that the yellow covered lever is in a horizontal position. This is located at the bottom of the the tank. Refer to Figure 2-2.

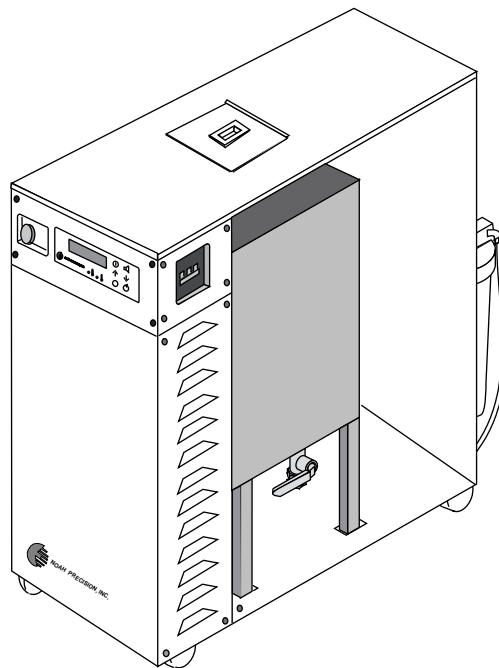


Figure 2 - 2 Model 2021 Reservoir

7. Lock the front two casters.



Warning

For earthquake safety, the unit must be bolted on to the ground.

2 Installation

8. Connect the power cord. Service must be 208 VAC, 30 amp, 5 wire. Check the power distribution for proper phases.

x = A phase, y = B phase, z = C phase, w= neutral, g = ground

9. Connect the communication port.

Reattach the left side panel and hook-up is complete. The tank is filled during the start-up procedure.

System Start-up

Before activating the Model 2021, check that the EMO button (located on the left side of the controller front panel) is protruding. If pressed in, twist clockwise to reset.

The start-up procedure includes

- User Setup
- Factory Setup
- Correct filling procedures for the cooling tank
- Temperature calibration

All start-up functions are programmed through the controller.

From the side panel circuit breaker, turn the power switch to ON. See Figure 2-3. The thermoelectric module, heater element and pump motor are automatically reset to the Off (idle) state when the system is powered up.

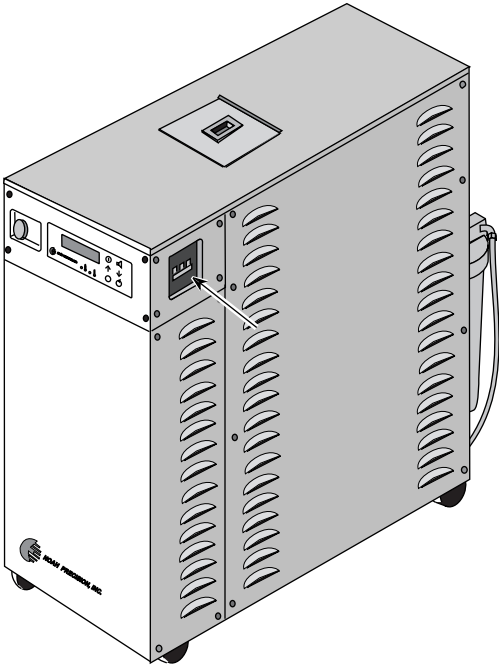



Figure 2 - 3 Location of Power Switch

The factory model number appears on the controller display for approximately seven seconds while the unit initializes and executes a set of self-diagnostics.

NOAH PRECISION
MODEL 2021

2 Installation

When diagnostics are complete, the screen displays the current IDLE Mode and Setpoint.

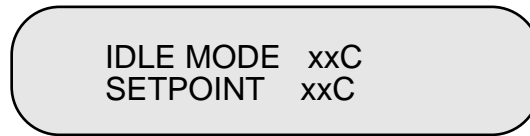

If the display does not respond, check that the 9-pin circular connector at the back of the unit is plugged in correctly. If the display still fails to respond, refer to Section 6 Troubleshooting.

Refer to Figure 2-4 for the location of keys on the controller interface to program the unit.

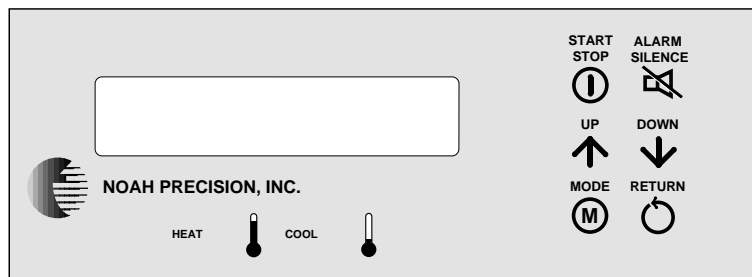



Figure 2 - 4 Controller Interface

User Setup

Press the MODE key to enter the User Setup parameters. The display responds with a message to enter a user access code. This is initially set to 01 at the factory.



ENTER ACCESS CODE
XXXX

Use the UP and DOWN keys to enter a four digit code. Then press the MODE key again to continue programming user parameters. (If a user code is not required, simply press the MODE key a second time without using the UP and DOWN keys.)

The following display appears:



SETUP USER
SETPOINT XXX.XC

The second line of this screen begins a series of parameters that must be set or adjusted for individual use. Use the MODE key to advance through the various parameters. Use the UP and DOWN keys to change the settings. Pressing and releasing the key

2 Installation

immediately changes the setting of the least significant digit, pressing and holding the key down increments values automatically and rapidly.

To exit the SET-UP Mode, press the RETURN key.

Table 2-1 lists the screen displays for the User Setup, the parameters associated with the display, the range allowed within each parameter, and the factory programmed value. Descriptions of each parameter follow.

Table 2 - 1 User Setup Parameters

Display	Parameter	Range	Factory Values
SETPOINT	Process setpoint	0.0 to max deg C T/C -5.0 to max deg RTD	varies
LOC SETPOINT	Local process setpoint*	0.0 to max deg C T/C -5.0 to max deg RTD	varies
REM SETPOINT	Remote process setpoint*	0.0 to max deg C T/C -5.0 to max deg RTD	varies
HIGH TEMP	High temp. setpoint	0.0 to max deg C T/C -5.0 to max deg RTD	42.5 °C
HIGH DEV ALARM	High deviation alarm*	0.0 to 9.9 °C	5.0 °C
LOW TEMP	Low temp. setpoint	0.0 to max deg C T/C -5.0 to max deg RTD	9.0 °C
LOW DEV ALARM	Low deviation alarm*	0.0 to 9.9 °C	5.0 °C
LOW RESIST	Low resistivity setpoint	0.00 to 18.18 mohm	1.50M
LOW FLOW	Low flow setpoint	0.0 to 20.0 gpm	0.0 gpm
STAGE DELAY	Stage delay	0 to 250 seconds	60 sec
CYCLE RATE	Cycle rate	1 to 25 seconds	05 sec
PROP BAND	Proportional band	0.0 to 25.0 deg C	1.2 °C
RESET	Reset (integral)	0.0 to 25.0 minutes	1.7'
RATE	Rate (derivative)	0.0 to 25.0 minutes	0.9'

Display	Parameter	Range	Factory Values
2ND HEATER	Second heater	On/Off	Off
SENSOR CALI	Sensor calibration	+/- 9.9 deg C	varies
SYSTEM ID	System ID number	00 to 99	
BAUD RATE	Baud rate	300 to 19,200	9600
ACCESS CODE	Access code	0 to 9999	01
AUTO TUNE	Auto tune	On/Off	Off
SCAN TIME	Scan time	0 to 5 seconds	03 sec
FILLMONITOR***	Fill monitor display	On/Off	Off

* 100 mV/ °C machines only

** The temperature deviation setpoint must be programmed to activate at 2.5 degrees below the process setpoint.

*** This parameter must be ON when filling the cooling tank. Refer to the parameter descriptions on the next page for detailed instructions.

User Setup Parameters

SETPOINT

This is the Process Setpoint for the system. It is the target temperature for the three mode PID algorithm.

LOC SETPOINT (if applicable)

This parameter is the Process setpoint for 100mV/ °C machines in local mode.

REMOTE SETPOINT (if applicable)

This parameter is the Process setpoint for 100mV/ °C machines in remote mode. Once the temperature is programmed with this parameter, the temperature is controlled by the process chamber via a 24 VAC signal to the 2021 TCU. If the 24 volt signal is active, the process temperature is controlled by the Remote setpoint. If the 24 volt signal is inactive, the process temperature is controlled by the

2 Installation

Local setpoint. (This parameter excludes the need to change the program setting of the RS232 parameter in the Factory Setup.)

HIGH TEMP

This is the High temperature alarm setpoint. The Process temperature is continually compared with this setting. If exceeded, the High Temperature alarm is activated. (To eliminate this alarm, set the respective setpoint to its lowest obtainable value. This value depends on the SENSOR selection. For the T/C sensor, the value is 0.0 °C; for the RTD sensor, -25.0 °C.)

HIGH DEV ALARM (if applicable)

This parameter changes the High temperature alarm setpoint from a direct setpoint to a relative setpoint. The High temp alarm will activate when the process temperature exceeds the process setpoint plus the High deviation alarm setpoint. For example, if the High dev alarm is set at 5 °C and the Process temperature is set at 18.0 °C, and the ACTIVE Mode temperature is above 23.0 °C, the High process temp alarm activates.

LOW TEMP

This is the Low temperature alarm setpoint. If the Process temperature falls below this setting after warmup, the Low Temperature alarm is activated.

LOW DEV ALARM(if applicable)

This parameter changes the Low temperature alarm setpoint from a direct setpoint to a relative setpoint. The Low temp alarm will activate when the process temperature falls below the process setpoint minus the Low deviation alarm setpoint. For example, if the Low dev alarm is set at 5 °C and the Process temperature is set

at 18.0 °C, and the ACTIVE Mode temperature is below 13.0 °C, the Low process temp alarm activates.

LOW RESIST

This is the Low resistivity alarm setpoint. If Resistivity is activated in Factory Setup, this value is continuously compared with the Resistivity input. If the Resistivity input falls below this level for 10 seconds, a Low Resistivity alarm appears.

LOW FLOW

This is the Low flow alarm setpoint. If Flow is activated in Factory Setup, this value is continuously compared with inputs from the 962-L. If the flow falls below this level for 10 seconds, a Low Flow alarm is activated.

STAGE DELAY

This is the Stage delay time interval, the time between adding or removing stages of cooling. If heater output is operating above 88% output, cooling stages are disabled at the Stage delay interval. If heater output is operating at below 12% output, cooling stages are enabled at the Stage delay interval. This is set at 60 seconds at the factory. A shorter time results in a faster response (switching of the thermoelectrics) but is not stable.

CYCLE RATE

This parameter sets the Cycle rate for the system. Because the controller is a standard proportional time base unit, the Cycle rate sets the rate at which the heat output cycles on and off. The amount of time the output is on during each period is controlled to match the heat requirements of the system.

PROP BAND

2 Installation

The Proportional band parameter determines the cycling range for the controller in degrees Celsius. This is the P parameter (Proportional).

RESET

The Reset parameter sets the integration time for the second mode in the three mode control scheme. Setting this parameter to 0.0, eliminates the reset function. This is the I parameter (Integral).

RATE

The Rate parameter sets the differentiation constant for the third mode of the three mode control scheme. Setting this parameter to 0.0, eliminates the rate function. This is the D parameter (Derivative).

2ND HEATER

This parameter eliminates or activates the second heater output. When activated, the heater turns on when the temperature setpoint is set to ≥ 40 °C.

SENSOR CALI

This is the digital calibration for the Process sensor and a direct digital offset to the Process temperature. To calibrate, place a thermometer or temperature calibrator in the tank. Measure the value, then adjust the calibration using the UP and DOWN keys. Press the RETURN key to save. Repeat these steps until the Process temperature matches the temperature on the thermometer. Remember to press RETURN to save.



Note

The 2021 is temperature calibrated when shipped from the factory. The USER MUST RECALIBRATE the temperature at the facility to verify the number settings.

SYSTEM ID NUMBER

Used with the communications protocol, the number identifies each unit in a system configuration that uses multiple controllers.

BAUD RATE

This parameter sets the Baud rate for the communications protocol (300, 600, 1200, 2400, 4800, 9600, 19200). Default is 9600 baud.

ACCESS CODE

This Access code must be matched to enter the USER Setup parameters. If this parameter is set to zero, no access code is required.

AUTO TUNE

This parameter activates the AUTOTUNE mode. If set to On, the system automatically begins the AUTOTUNE routine the first time the system enters ACTIVE Mode. AUTOTUNE adjusts the PID parameters for optimal process results. The words AUTOTUNE flash during the AUTOTUNE routine.

During this procedure, the system runs a test sequence to determine basic system characteristics. Appropriate tuning values

2 Installation

are calculated and automatically inserted into the PROP BAND, RESET and RATE parameters.



Note

The system is tuned to 18 °C before leaving the factory. For better process control, Noah Precision recommends that the user use the Autotune parameter at its specific operating process temperature.

SCAN TIME

The second line of the ACTIVE Mode display can be set to display alternately current flow and resistivity values. The display time of each value is set with this parameter.

FILL MONITOR

This parameter activates the Fill Monitor mode to allow for precise filling of the cooling tank or reservoir. Press the UP key. The top line of the display reads FILL MONITOR and the second line shows the level of the reservoir fluid. At the initial start-up and when fluid levels are low, the following screen appears.



FILL MONITOR
ADD FLUID

The level is sensed by a 3-level switch wired to the LLT, LLR and SP5 input. If the fluid level is below full, the lower display line reads

ADD FLUID. When the reservoir is full, the display changes to FULL. A full tank is sensed by a closed switch at the LLR input. Figure 2-5 shows the displays activated by the 3-level switch.

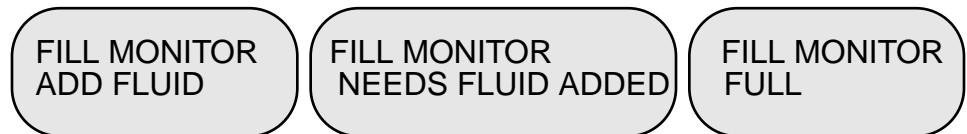


Figure 2 - 5 Fill Monitor 3-Level Switch Displays

To add fluid, open the small hinged door located on the top center of the unit. Unscrew the small (2 inch diameter) stainless steel plug.

Do NOT use anti-freeze automotive liquid.



Warning

Ethylene glycol is a hazardous chemical.
Dispose of properly.

Reservoir capacity is 4.5 gallons not including external plumbing and DI cartridge containers.

Fill until the water is visible to the bottom of the lid coupling (approximately 1 3/8 inches from the top). A special razz tone sounds when the tank is full. Put the plug back and close the lid. Check for leaks. Press the RETURN key to save and the DOWN key to exit the Fill Monitor mode. Save to go back to the ACTIVE or IDLE Mode display, or to exit User Setup.


Press the RETURN key to exit the SETUP Mode. The system is now in the ACTIVE Mode.

During warmup, unless the Process temperature exceeds the Low alarm setpoint, the alarm is not activated. This feature eliminates nuisance alarms during start-up.

2 Installation


Factory Set-up

Press the MODE Key to enter the Factory Setup Mode. If access code protection is required, enter a second access code using the UP and DOWN keys to enter a four digit code.

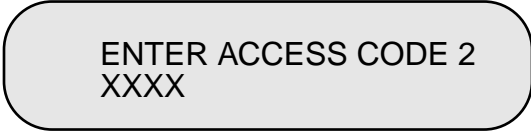

ENTER ACCESS CODE 2
XXXX

Press the MODE key a second time to view or program factory parameters. (If an access code is unnecessary, simply press the MODE key the second time without using the UP and DOWN keys.) If the access code matches, the following screen appears:

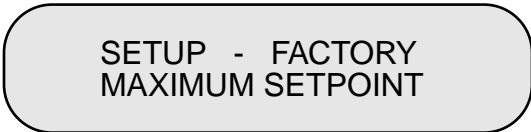

SETUP - FACTORY
MAXIMUM SETPOINT

The second line of this screen shows the first of a series of factory parameters. Use the MODE key to advance through the parameters. Use the UP and DOWN keys to adjust settings.

To exit the Factory Setup, press the RETURN key.

Table 2-2 lists the screen displays for the Factory Setup parameters, the parameters associated with each display, and the range allowed within each parameter. Descriptions of each parameter follow. These parameters are set at the factory to configure the system to specific equipment.



Caution

Changing a Factory Setup parameter can require a complete system reconfiguration.

CALL Noah Precision before changing a parameter if uncertain of the results.

Table 2 - 2 Factory Setup Parameters

Display	Parameter	Range
MAX SETPOINT	Maximum setpoint	-10.0 to 90.0 °C RTD
COOLING	Cooling Active	Yes/No
RESISTIVITY	Resistivity Active	Yes/No
FLOW ACTIVE	Flow option Active	Yes/No
SENSOR TYPE	Process sensory type	T/C or RTD
RS232 ACTIVE	RS232 Active	0= NO RS232 1= Normal RS232 2= PS* Write only 3= Flow Write only 4= PS&Flow write only
MODEL DISPLAY	Noah Model number	2021
SOFTWARE	Current software rev	XXXX
ACCESS CODE#2	Access code #2	0-9999

* PS = Process setpoint

Factory Setup Parameters

MAX SETPOINT

This parameter restricts the maximum setting ranges for all of the temperature parameters in the user setup parameters.

COOLING

This parameter activates or deactivates the system cooling feature. If set to NO, the cooling outputs become inactive.

RESISTIVITY ACTIVE

2 Installation



Note

This parameter activates or deactivates the Resistivity reading option. If set to YES, the unit relays information from the Resistivity monitor to the proper controller displays.

FLOW ACTIVE

This parameter activates or deactivates the Flow reading option. If set to YES, the unit relays information from the 962-L to the proper controller displays.

SENSOR TYPE

This parameter identifies the type of sensor (T/C to RTD) used as the Process sensor. This setting **MUST BE COORDINATED** with DIP switch settings on the 962J board. For correct DIP switch settings, refer to Figure 4-1.

When changing sensor type, **all other temperature setpoint values must be changed**. There is a 25 degree offset between the RTD and T/C sensor types because of the temperature ranges obtainable by the different sensors. RTD is standard on the Model 2021.

RS232 ACTIVE

This parameter activates or deactivates the RS232 communications function.

Settings:

0 = removes the SYSTEM ID NUMBER and BAUD RATE parameters

- 1 = activates all functions of the RS232
- 2 = the WRITE command is restricted to the Process setpoint parameter
- 3 = the WRITE command is restricted to the Flow reading parameter
- 4 = the WRITE command is restricted to the Process setpoint and Flow reading parameters

MODEL DISPLAY

Controls the system model number display screen when the system is turned on the first time. Noah Precision customizes the controller display to the correct model number.



Caution

This number is also used to set up the specific logic for individual controller configurations. The software automatically reconfigures the controller to match the model number designated in this parameter setting.

SOFTWARE


This is a READ ONLY display indicating the current system software.

ACCESS CODE #2

This Access code must be matched to enter the Factory Setup parameters. If this parameter is set to 00, no access code is

2 Installation

required. To change this code, enter 222 for the access code. Press the MODE key until the display reads

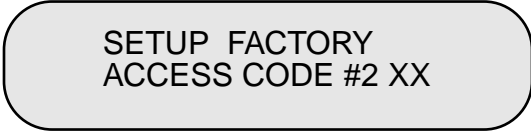

SETUP FACTORY
ACCESS CODE #2 XX

Press the UP or DOWN key to change the access code, then press RETURN to save. Factory access code is set at 99 at Noah Precision.

Saving Parameter Changes

The system automatically enters a SAVE Mode when the RETURN key is pressed to exit either User Setup or Factory Setup. The following screen appears:



* * SAVE MODE * *
* * PLEASE WAIT * *

All setup parameters become stored into EEPROM memory. This is a permanent (10 year minimum life) memory that does not require battery backup. The SAVE routine takes about 2 seconds to complete.

This feature allows OEM users to specify the initial condition parameters set at the factory. It also allows the user to modify the appropriate parameters from the keyboard without the risks associated with manual adjustments.

When SAVE is complete, the system is in ACTIVE or IDLE Mode.

Com-Link Start-up

The Communication Link Start-up procedure allows the user to set and adjust the Process temperature of the Model 2021 from a remote site. Refer to Section 5 for optional equipment available on the Model 2021.

The Model 2021 is connected to etcher/CVD equipment which sends a voltage signal that translates its programmed temperature to the 2021, and the 2021 sends back a signal to the etcher/CVD relating the current temperature of the TCU. This eliminates the need to set both the etcher/CVD and the Model 2021 temperatures.

There are two interface options on the Model 2021:

- 100 mV/°C
- RS-422

Voltage requirements and pin connections are described below. Start-up procedures for each link follow.

100 mV/ °C Option

Voltage requirements: -2.5 to 7.5 VDC
 1.0 VDC = 10 °C

Comm port:

A) 37-pin D-sub mini connector receptacle

Pins	24 & 5	RX (receive signal from etcher/CVD)
	20 & 1	TX (transmit signal to etcher/CVD)
	26 & 7	fail signal
	28 & 9	warning signal
	37 & 19	remote Start
	36 & 18	remote Stop

B) 9-pin circular plastic connector

2 Installation

Pins	1 & 2	EMO from chiller (2021)
	3 & 4	remote/local input (24 VAC)
	5 & 6	EMO from etcher

1. Check the connections on the 37-pin connector on the rear panel of the unit.

Pin	24	Positive voltage IN
	5	Negative voltage IN
	20	Positive voltage OUT
	1	Negative voltage OUT

2. Applying voltage to pins 24 and 5 changes the temperature control unit's process temperature setpoint to a corresponding value. For example, applying 2.3 volts sets the temperature to 23 °C or when the TCU reaches 23 °C, the corresponding voltage of pins 20 and 1 is equal to 2.3 volts.
3. Press the RETURN key to save and return to the IDLE Mode.

For processes that require temperatures below 0.0 °C, contact Noah Precision.

The interface is now complete. Press the RETURN key to enter the ACTIVE Mode for the Model 2021.

RS-422 Interface

Comm port: 25-pin D-sub mini connector receptacle

Pins	2	TD (+) from TCU
	24	TX (-)
	3	RD (+) from etcher/WD
	23	RD (-)
	7	Signal ground

Channel setting is hard wired. Refer to Appendix E.

System Shut-down

System shut-down requires three steps.

1. Press the STOP key on the display.
2. Turn off power to all circuits with the power switch located on the right side of the Model 2021.
3. Pull out the TCU plug.

Operation

The Model 2021 temperature control unit is designed to operate automatically after the initial setup. Refer to Section 2 for Setup procedures.

Turning the System ON

To power up the system, execute the following procedure.

1. Plug in the power cord at the back of the unit. This is the 208 VAC, 30 amp 5-wire connector.
2. Check that the EMO button is protruding. If not, turn clockwise to reset. The EMO button is located on the left side of the controller display.
3. Turn the power switch ON. This is the circuit breaker on the side panel of the unit. The thermoelectric module, heater element and pump motor automatically reset to the OFF (idle) state when the system is powered up.

The system enters the IDLE Mode. The controller display screen shows the current discharge temperature and the Setpoint temperature.



IDLE MODE XX.XC
SETPOINT XX.XC

3 Operation

4. Press the START key to enter the ACTIVE Mode. This key is located on the controller face plate.

The thermoelectric cooling and heating outputs and the pump come on according to the Set-up parameters.

Process Operation

A four and one-half gallon mixture of 50% deionized water and 50% ethylene glycol or Galden heat transfer fluid is recirculated from a stainless steel tank to the chamber that is being cooled. A regenerative turbine pump draws the process water from the tank to the chamber. Some of the flow goes to the dual DI cartridges. The DI cartridges are parallel to the unit being chilled. The process fluid flowing back to the chamber is then pumped through the thermoelectric module. Here the heat from the process fluid is transferred to the facility water. The process fluid then goes to the reservoir where an immersion heater regulates the process fluid to the desired temperature. See Figure 3-1 for the circulation flow of process fluid.

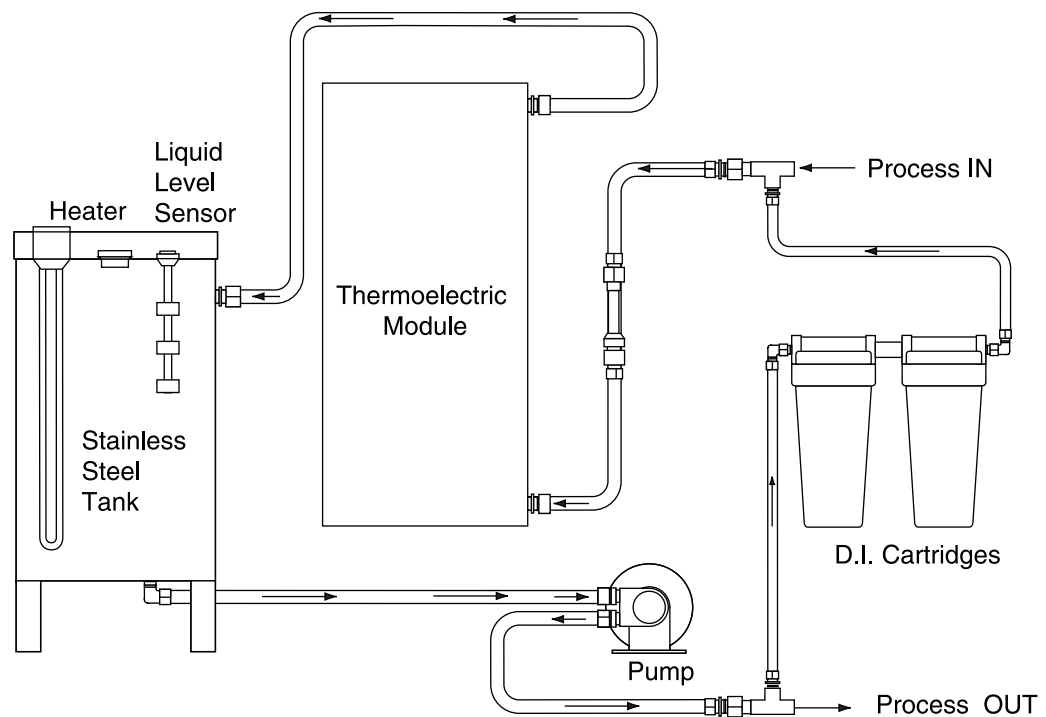


Figure 3 - 1 Circulation of Process Fluid

Appendix D provides diagrams of process plumbing.

The pump and AUX 2 outputs usually stay on during process operation and the thermoelectric output is active during most of the operation. However, if the Process temperature setpoint is higher than the current process temperature, the thermoelectric output remains off until the temperature reaches the Process setpoint minus the Cooling deviation (PS-CD). This feature reduces system warmup time.

The Model 2021 uses a two-stage cooling output routine. When the system enters the ACTIVE Mode, it initiates one stage of cooling and then begins counting down the stage delay. Stage Delay is amount of time that must pass before another cooling stage can be activated or deactivated as required. Temperature control (heat cycling) is based on the three part PID algorithm.

The two LEDs on the face panel of the controller indicate the immediate status of the heating and cooling outputs. When the Heat LED is on, the heater output is active. When the Cool LED is on, the thermoelectric output is active.



Note

For operating temperatures above 60.0 °C, turn the cooling to OFF.

Operation is controlled through the 962-JG controller. Refer to Figure 3-2 for key locations.

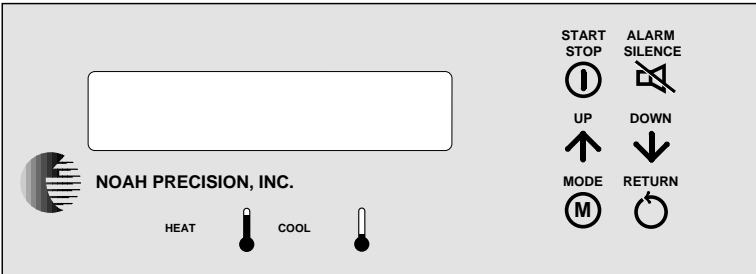


Figure 3 - 2 Controller Key Locations

3 Operation

Controller Keys

There are six keys on the controller. When pressed, a short beep sounds if valid key inputs are received. If inputs are invalid, a razz tone sounds.

START/STOP key

This key starts and stops system operation. If the system is in IDLE Mode, pressing this key puts the system in ACTIVE Mode. If the system is in ACTIVE Mode, pressing this key puts the system back in IDLE Mode.

If the system is in ALARM Mode with active alarms, pressing this key has no effect on the active alarms. It does erase alarms that have been cleared and any active alarms are sounded again. If the system is in ALARM Mode and reads "Cleared," pressing this key returns the system to ACTIVE Mode.

This key overrides the remote Start/Stop option.. If pressed, the Remote Start/Stop sequence must be adjusted.

ALARM SILENCE Key

This key eliminates the audio portion of an alarm or diagnostic display. Because the system maintains an Alarm/Diagnostic history, this key can also be used to review all active alarms or diagnostics. Just press repeatedly to sequence through. After alarms are cleared, pressing this key removes them from the alarm history.

All alarms must be cleared as well as silenced. If an alarm is silenced but not cleared, system start-up automatically reactivates the alarm. If an alarm or diagnostic is inactive but not silenced, the system automatically silences the alarm on start-up.

UP Key

This key is used during the SETUP Mode to advance the display setting. Pressing once and releasing allows the user to set the least significant digit of the display. Holding the key down causes the display to increment automatically.

Used in the IDLE, ACTIVE or ALARM Modes, the UP key toggles the second line of the display between SETPOINT, FLOW and RESISTIVITY depending on what was selected.

DOWN Key

This key is used during the SETUP Mode to decrease the display setting. Pressing once and releasing allows the user to set the least significant digit of the display. Holding the key down causes the display to decrement automatically.

Used in the IDLE, ACTIVE or ALARM Modes, the DOWN key toggles the second line of the display between SETPOINT, FLOW and RESISTIVITY depending on what was selected.

MODE Key

This key puts the system into the SETUP Mode and then advances through the setup parameters. To exit the SETUP Mode, use the RETURN key.

RETURN Key

This key is used to exit the SETUP Mode. When pressed, it automatically activates an EEPROM SAVE.

3 Operation

Modes of Operation

There are four basic operating modes on the Model 2021.

- IDLE
- ACTIVE
- SETUP
- ALARM

IDLE Mode

When the system is powered up, it automatically enters IDLE Mode. Pushing the Start key while the system is in ACTIVE Mode, returns the system to IDLE Mode.

If an alarm occurs in IDLE Mode and is cleared, the system automatically reverts to IDLE Mode.

ACTIVE Mode

The system enters the ACTIVE Mode when the Start key is pushed if no alarms or diagnostics occur. This is the Model 2021's normal operating mode.

If an alarm occurs, it must be cleared and silenced (Alarm Silence key) before the system be reactivated. If the system enters the IDLE Mode, press the Start key to return to ACTIVE Mode.

SETUP Mode

This mode is used to enter parameter values and options for both User Setup and Factory Setup. The system must be in the SETUP Mode to fill the cooling tank. Press the Start/Stop key to enter IDLE Mode, then press the Mode key to enter the SETUP Mode. To exit the SETUP Mode, press the RETURN key.

If an alarm occurs while in the SETUP Mode, the alarm display indicates the type of alarm but the system stays in the SETUP Mode.

ALARM Mode

If the system senses a problem, it exits ACTIVE Mode and enters an ALARM Mode. The display screen identifies the type of alarm on the top line; the second line indicates the status of the the alarm, active or cleared. An external audio also sounds unless it has been deactivated during User Setup.

Alarms act in conjunction with ACTIVE or IDLE Mode. If the alarm is a Master relay alarm, the system automatically changes from ACTIVE Mode to IDLE Mode. If it is an Information only alarm, the system remains in its current mode. The screen, however, always identifies the system as in ALARM Mode.

Alarm routines do not terminate cycle runs when an alarm occurs but initiate any necessary precautions. The audio alert lasts six seconds followed by a sixty second auto silence if any of the face panel keys are pressed.

Refer to Section 4 for detailed explanations of Model 2021 alarms and correct procedures to clear alarms.

Pressing the Alarm Silence key while in the ALARM Mode, causes the second line of the display to sequence through and display any current alarms.

AutoTune

The system can automatically tune the PID parameters of the unit to fit the specific requirements of a given system. This procedure takes up to ninety minutes depending on system configuration.

1. Set Setpoint and Cycle rate parameters before activating AutoTune.

3 Operation

To activate AutoTune

2. Enter User Setup and change the AutoTune parameter to YES.
3. Press the RETURN key to exit the SETUP Mode.
4. If the system is in IDLE Mode, press the Start key. If the system is in ACTIVE Mode, it automatically starts AutoTune.

The system runs a test sequence to determine basic system characteristics, then calculates the appropriate tuning values and automatically inserts them into the Prop Band, Reset and Rate parameters. When AutoTune is completed, the system returns to ACTIVE Mode.

To cancel AutoTune with no effect on previous tuning parameters, press the Stop Key or enter the SETUP Mode and change the AutoTune parameter back to NO.

Tuning the PID Controller

The 962-J controller uses a PID control scheme to provide constant temperature control. The controller references a temperature setpoint and then tries to match and maintain that setpoint.

To adjust PID controllers, the following terms must be understood.

Proportional Band (PB)

This is the value that produces constant amplitude cycling. In other words, PB is the percent change in measurement (at a constant setpoint) required to cause 100% change in output.

Integral

This is the action of eliminating offset (the difference between the setpoint and the actual temperature) when it exceeds requirements.

Integral action is based on the principle that the response must be proportional to both the size and duration of the error.

**Note**

Proportional and integral actions share one serious limitation: a significant error must be detected before either produces a strong response.

Derivative

This action is based on the principle that the controller must also respond to the rate at which the measurement is changing, even though the actual error is still small.

When a measurement starts to change, derivative action generates an immediate response proportional to its rate of change.

Each system must be tuned to obtain an acceptable ramp up in temperature from ambient to setpoint. This procedure only needs to be done once unless a component has been replaced or the type of process fluid has been changed.

1. Enter User Setup and change the following parameters to the indicated values:

Cycle rate (CR)	5
Proportional band (PB)	5
Reset (RE)	0
Rate (RA)	0

2. Save these values in memory and set the controller to control the tank temperature using an RTD probe.
3. Allow the process to run at a setpoint that allows the temperature to stabilize with the heat input required.

3 Operation

With the Rate and Reset parameters set to zero, the temperature will stabilize with a steady state deviation between the setpoint and the actual temperature.

4. Observe the measurements on the display noting whether there are regular cycles or oscillations in the temperature. (An oscillation might be as long as 30 minutes.) Record and plot readings.

The tuning procedure is easier to follow if a strip chart recorder is used to monitor the process temperature.

5. If there are no regular oscillations on the temperature, divide the PB by 2. Allow the process to stabilize and check for temperature oscillations. If there are no oscillations, divide the PB by 2 again. Repeat until cycles or oscillations begin. Refer to Figure 3-3 below.

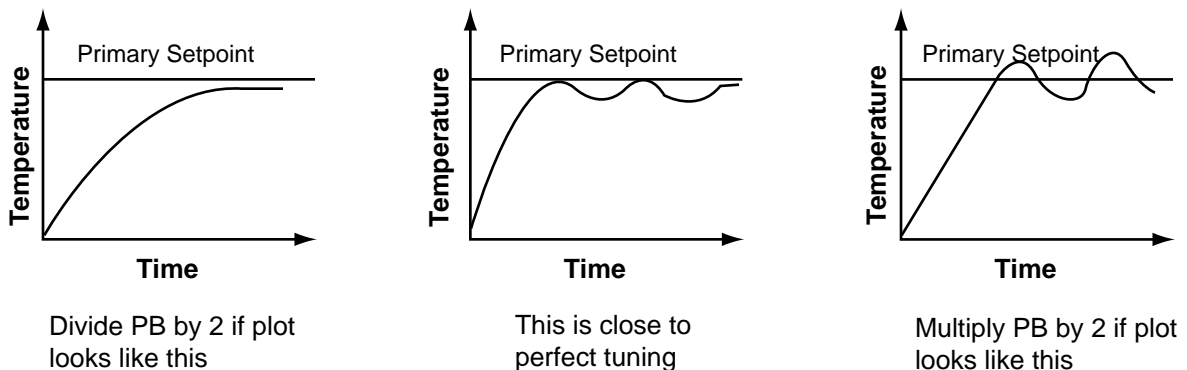


Figure 3 - 3 Temperature Oscillations

6. If oscillations occur immediately, multiply the PB by 2. Observe the resulting temperature for several minutes. If the oscillations continue, increase the PB by factors of 2 until the oscillations stop.
7. The PB is now near its critical setting. Increase or decrease the PB setting carefully until the cycles or oscillations just barely appear in the temperature recording.

- 8. Read the steady state deviation between the setpoint and the actual temperature with the critical PB setting. Because the temperature cycles a bit, use the average temperature.
- 9. Measure the oscillation time, in minutes, between the neighboring peaks or valleys. Use a chart recorder or read the measurements at one-minute intervals to obtain the timing. See Figure 3-4.

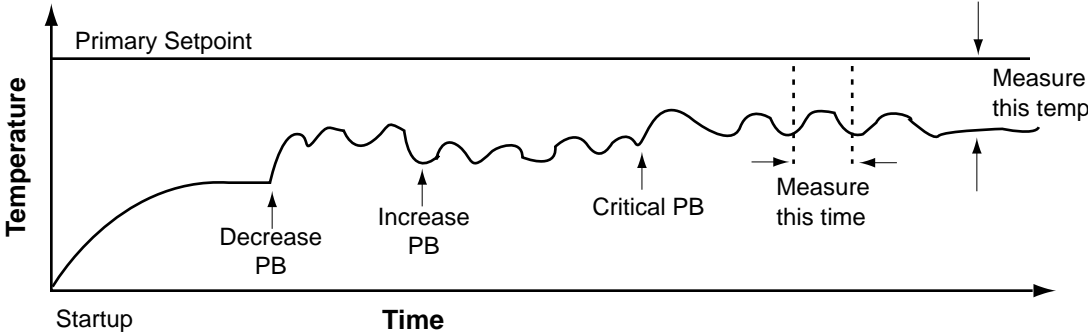


Figure 3 - 4 Oscillation Time

- 10. Increase the PB setting until the temperature deviation increases to 65%. See Figure 3-5.

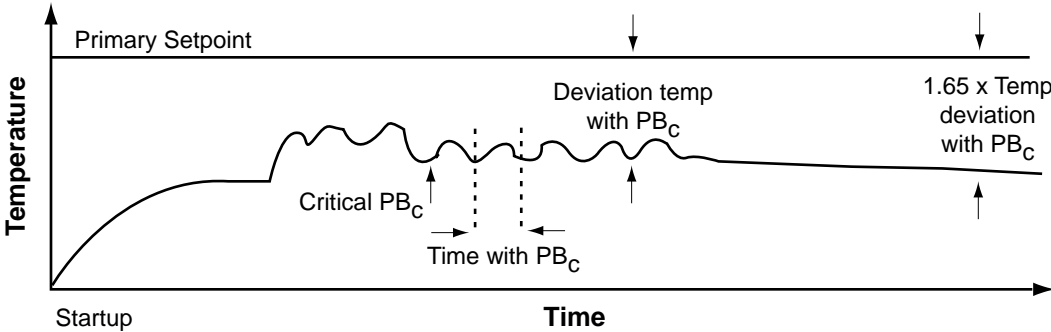


Figure 3 - 5 Final Temperature Deviation

3 Operation

The required temperature deviation can be calculated by multiplying the initial temperature deviation with the critical PB setting by 1.65 or use Nomogram I below in Figure 3-6. Try several settings of the PB to reach the required final temperature deviation.

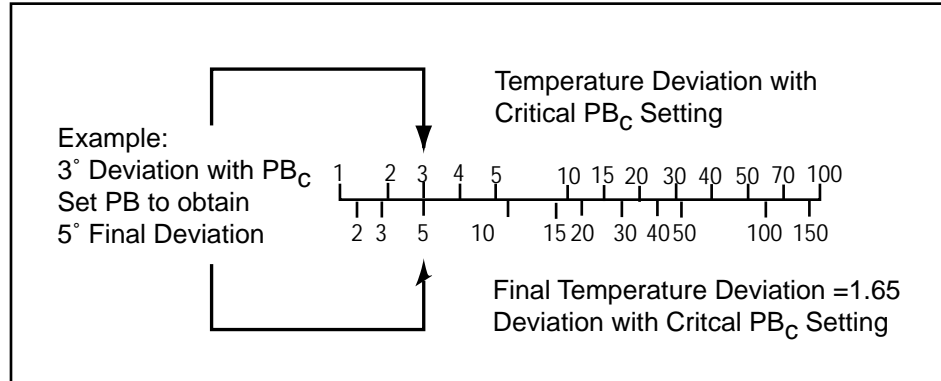


Figure 3 - 6 Nomogram I

These are all measurements necessary to obtain optimum performance from the controller.

11. Use the oscillation time measurement above to calculate the value of the Reset Parameter in repeats per minute.

$$RESET = 8/5 \times 1/T_o$$

T_o = oscillation time in minutes

Or use Nomogram II in Figure 3-7 to calculate the RESET value.

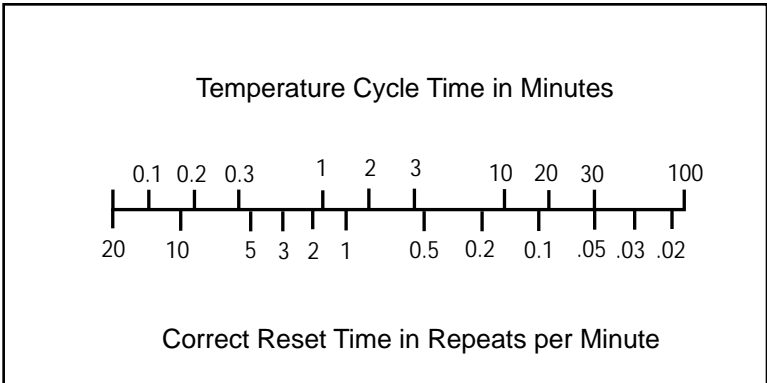


Figure 3 - 7 Nomogram II

- 12. Using the same oscillation time, calculate the value for the Rate Parameter in minutes.

$$\text{RATE} = T_o/10$$
 To is oscillation time

Or use Nomogram III in Figure 3-8 to calculate the RATE value.

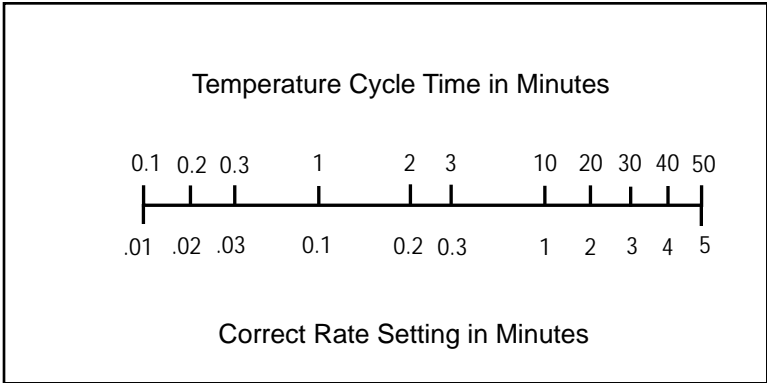


Figure 3 - 8 Nomogram III

3 Operation

Turning the System OFF

To turn the Model 2021 off, press the STOP key on the display. If an alarm is active and operation must be stopped, the alarm automatically appears when the system is turned on again.

Be sure to turn off power to all circuits with the power switch located on the side of the front panel.

Alarms

The Model 2021's alarm system automatically and continually monitors for alarm conditions. If an alarm occurs, system status immediately changes to ALARM Mode and the specific alarm is displayed on the controller screen. As an added precaution, an audio alert sounds. When the alarm is cleared, the system recovers as if no alarm had occurred.

An AutoSilence feature turns off the audio alarm after six seconds. Sound remains off for sixty seconds while the operator reads the display screen. If any of the controller keys are used, the audio remains off for sixty seconds from the last key stroke.

Except for fuse alarms, all alarms have a ten second delay period. This means that the alarm must exist for ten consecutive seconds before the system enters ALARM Mode. Fuse alarms have a fifteen second delay.

Alarm displays have two lines. The top line identifies the type of alarm. The second line indicates whether the alarm is active or cleared. For example,



T/E OVERTEMP
(ACTIVE)

When an alarm is cleared, the display changes.



T/E OVERTEMP
(CLEARED)

4 Alarms

Once an alarm has been cleared, it must also be silenced by pressing the Alarm Silence key. This key can also be used to read any other current alarms.

Depending on the alarm condition, the system can have more than one alarm at a time. Always clear the first alarm. Some alarms have other alarms tied to them. For example, if a Heater Overtemp alarm occurs, the following alarms appear on the display:

- TE #3 Fuse
- TE#2 Fuse
- Heater Fuse
- Pump Fuse
- TE #1 Fuse

If an alarm is present when the system is turned on, the system stays in IDLE Mode. If the alarm occurs while the system is in ACTIVE Mode, the system remains in ACTIVE Mode or defaults to IDLE Mode depending on the type of alarm.

Types of Alarms

The following tables list the alarms that can occur.

Table 4-1 lists information only alarms. They have no effect on system operation.

Table 4-2 lists alarms that deactivate the heater or T/E cooling outputs. They have no other effect on the system.

Table 4-3 lists alarms that deactivate the master relay. These alarms result from external wiring problems and do not involve the controller microprocessor.

Descriptions of each alarm follow. Refer to Appendix E for Electrical circuitry and Appendix F for circuit markings. Appendix G is a list of acronyms used throughout this manual.

If an alarm appears that is not listed in these tables, call Noah Precision immediately.

Table 4 - 1 Information Only Alarms

Alarm Display	Description
FLOW COMO ERROR	Flow communication error
LOW FLOW	Flow input falls below Low flow parameter
LOW RESISTIVITY	Resistivity falls below Low resistivity parameter
NEEDS FLUID ADDED	Reservoir needs fluid
RESIST COMO ERROR	Resistivity communication error
SP3	Open switch in input SP3
SYSTEM FAILURE	Malfunction in a circuitry component

Table 4 - 2 Output Deactivation Alarms

Alarm Display	Description
BAD PROCESS SENSOR	Bad or missing main temp sensing input
HEATER FUSE	Open heater fuse
HIGH LIMIT T/C	Over temperature condition on the High limit thermocouple input
HIGH PROCESS TEMP	Process temp exceeds high alarm setpoint
LOW FLOW HOUSE WATER	Low flow condition in facility water supply
LOW FLOW PUMP	Low flow condition in process flow loop
LOW PROCESS TEMP	Process temp falls below low alarm setpoint
OPEN SENSOR -HI LIM	Bad or missing thermocouple sensor on High limit thermocouple input
PUMP FUSE	Open pump fuse
SSR OVERTEMP	High temp condition on Heater SSR
TANK OVERTEMP	Open Tank snap switch input
T/E FUSE #1	Open fuse for thermoelectric cooler #1
T/E FUSE #2	Open fuse for thermoelectric cooler #2
T/E FUSE #3	Open fuse for thermoelectric cooler #3

4 Alarms


Table 4 - 3 Master Relay Alarms


Alarm Display	Description
HEATER OVERTEMP	Open Heater thermal snap switch input
LL RESERVOIR	Low liquid level condition in reservoir
SAFETY COVER OFF	Open SP4 input , safety cover not closed
T/E OVERTEMP	Open Thermoelectric snap switch input

Alarm Descriptionst

The troubleshooter must follow the steps deliniated below in sequence. The numbers are a level of hierarchy in themselves.

For example,

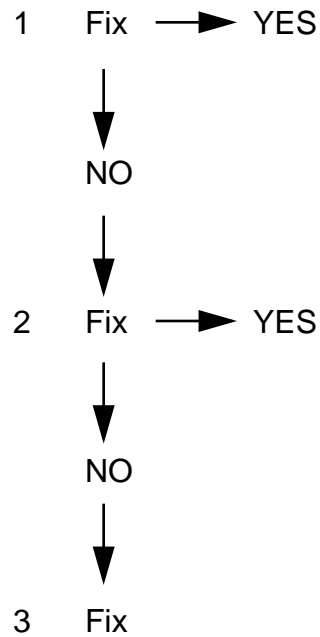

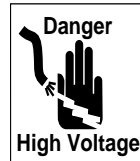

Danger

**High voltage is active in this system.
Troubleshoot components only if power has
been TURNED OFF.**

Information Only Alarms

FLOW COMO ERROR

The Flow Communication Error alarm is only active if the Flow parameter has been selected in Factory Setup. This alarm is activated if the communication link between the resistivity monitor and the unit is disrupted.

To clear:

1. Disconnect the power cord.
2. Check the wiring to the 962L board.
 - Pin 9 = + Positive, red
 - Pin 10 = In signal input, white
 - Pin 11 = - Gnd, black
3. Replace the 962-JG EEPROM



Note

Wiring is subject to change when optional boards are installed. Refer to Appendix E for wiring diagrams.

4 Alarms

LOW FLOW

The Low Flow alarm is active only if Flow Active has been selected in Factory Setup. When active, the Flow input is continuously compared to the Low Flow parameter. The alarm is activated if the Flow falls below the parameter setting for 10 seconds. This alarm is active if the optional flow meter is installed.

To clear:

1. The system must be in ACTIVE Mode
2. Check on the loss of flow by opening the tank lid. If the process water is moving, there is flow.
3. Check the lines for leaks.
4. Check the pump and motor.
5. Disconnect the power cord.
6. Check the wiring to the 962L board
 - Pin 9 = + Positive, red
 - Pin 10 = In signal input, white
 - Pin 11 = - Gnd, black

LOW RESISTIVITY

The Low Resistivity alarm is only active if the Resistivity parameter has been selected in Factory Setup. When active, the current resistivity input is continuously compared to the Low resistivity parameter. The alarm is activated when resistivity falls below the parameter setting for 10 seconds.

To clear:

1. Change DI cartridges
2. Disconnect the power cord.
3. Check resistivity probe connection
4. Check resistivity box connection
5. Adjust the alarm to a proper setting (at least 1.5 Mohm)

6. Replace resistivity probe
7. Replace resistivity box



oteWarning

Wiring is subject to change when optional boards are installed. Refer to Appendix E for wiring diagrams.

NEEDS FLUID ADDED

This alarm indicates that the reservoir needs fluid. It is activated by an open switch on input SP5.

To clear:

1. Fill the tank.
2. Check for leaks.
3. Disconnect the power cord.
4. Check the crimps and connectors (22AWG yellow) from the float sensor to the 962-JG board SP5 input.

RESIST COMO ERROR

The Resistivity Communication Error alarm is only active if the Resistivity parameter has been selected in Factory Setup. This alarm is activated if the communication link between the Resistivity monitor and the unit is disrupted.

To clear:

1. Disconnect the power cord.
2. Check the resistivity box connection
3. Check the pin connectors for miscrimps or loose wires.

4 Alarms

4. Check the 3-wire connection to the 962-JG board
D = clear; K = red; C = black
5. Replace the resistivity box.



Note

Wiring is subject to change when optional boards are installed. Refer to Appendix E for wiring diagrams.

SP3

This is the Spare #3 alarm. It is activated by an open switch on input SP3. The Model 2021 does not use SP3.

1. To clear:
2. Disconnect the power cord.
3. Check the Molex connector to the SP3 input on the 962-JG board.

SYSTEM FAILURE

This is a catch-all alarm to indicate when the system has detected a malfunction in one of the circuitry components. For example, EEPROM or RAM.

To clear:

1. Disconnect the power cord.
2. Replace the 962-JG board.

Output Deactivation Alarms

BAD PROCESS SENSOR

This alarm indicates a bad or missing main temperature sensor input, (T/C or RTD). When active, the temperature reads 0.0 °C for the T/C sensor and -25.0 °C for the RTD sensor. This alarm deactivates the controller output.

To clear:

- 1. Disconnect the power cord.
- 2. Check the DIP switch on the 962-JG board. See Figure 4-1. It should be set at RTD O O C C for pins 1, 2, 3, 4 respectively.
T/C should be set C C O O.
O = Open; C = Closed
- 3. Check the RTD wires to the J18 connector. Be sure the plus (+) is red and the two (R's) are white.
- 4. Replace the RTD sensor.

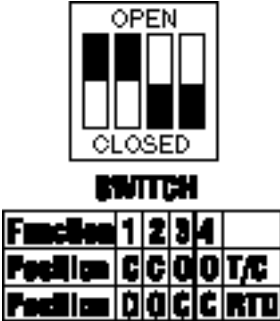


Figure 4 - 1 962-JG DIP Switch

4 Alarms

HEATER FUSE

This alarm indicates an open Heater fuse. It deactivates the heater output.



Caution

Be sure the heater has cooled down before removing.

To clear:

1. Disconnect the power cord.
2. Turn the power off.
3. Check the heater fuses and SSR.
4. Remove the heater and check for a short or an open.

HIGH LIMIT T/C

This alarm indicates an over temperature condition on the High limit thermocouple input. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the jumper wire to the High limit thermocouple on the 962-JG board. Be sure that the plus (+) and minus (-) terminals are shorted together.

HIGH PROCESS TEMP

The High Temperature alarm is activated when the process temperature exceeds the High alarm setpoint. This alarm deactivates the heater output.

To clear:

100 mV/ °C Interface machines only

1. Wait. The alarm sounds until the active temperature is within the High Deviation Temperature. It automatically clears itself when it reaches the Setpoint plus (+) the High Dev Temp.
2. Increase the High Dev Temp value.

Other machines

1. Adjust the high temp alarm.

All machines:

1. Disconnect the power cord.
2. Check the heater, heater SSR, and heater fuses
3. Adjust the Maximum Setpoint to the desired temperature in Factory Setup.
4. Check the connection into the thermoelectrics. The red wires go to the orange terminals; the brown wires go to the blue terminals.

LOW FLOW HOUSE WATER

This alarm indicates a Low flow condition in the facility water supply. This is sensed by an OPEN on the LFC input. It deactivates the heating and cooling outputs.

To clear:

1. Check the facility water connection leading into the system
IN indicates that water from the facility goes into the TCU.
OUT indicates that water from the TCU goes back to the facility.
2. Check the flow rate. It must be at least 3.0 GPM.
3. Disconnect the power cord.
4. Check the LFC connection on the 962-JG board.
5. Check the in-line flow sensor. It should have a closed contact when the flow rate is above 2.0 gpm. Replace if necessary.

4 Alarms

LOW FLOW PUMP

This alarm indicates a Low flow condition in the process flow loop. This is sensed by an OPEN on the LFP input. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the flow sensor connection (22 AWG, orange).
3. Check the wires going to the LFP connector on the 962-JG board.

LOW PROCESS TEMP

The Low Temperature alarm is activated when the process temperature falls below the Low alarm setpoint. This alarm deactivates the cooling outputs by deactivating the T/E output.

To eliminate false low alarms on start-up, the Process temperature is allowed to exceed the Low alarm setpoint one time during system warmup .

To clear:

100 mV/ °C Interface machines only

1. Wait. The alarm sounds until the active temperature is within the Low Deviation Temperature. It automatically clears itself when it reaches the Setpoint minus (-) the Low Dev Temp.
2. Change the Low Dev Temp to a bigger value.

Other machines

- 1 Adjust the Low Temp alarm

All machines:

1. Disconnect the power cord.
2. Check the thermoelectrics, T/E SSRs, and T/E fuses.

OPEN SENSOR - HI LIM

This alarm indicates a bad or missing thermocouple sensor in the High limit thermocouple input. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check sensor connections.
3. Check the Hi-Limit terminal wire jumper.
4. Replace the RTD sensor.

PUMP FUSE

This alarm indicates an open Pump fuse. It deactivates the pump output.

To clear:

1. Disconnect the power cord.
2. Check the pump fuses.
3. Check the pump for a short or an open.

SSR OVERTEMP

This alarm indicates a High temperature condition on the Heater solid state relay. This is sensed by an OPEN on the S-OT input terminals. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the Molex connector at the S-OT on J16 on the 962-JG board.

4 Alarms

TANK OVERTEMP

This alarm indicates an open Tank snap switch input. This is sensed by an OPEN on the TOT input. It deactivates the controller output.

To clear:

1. Check the model number in the Factory Setup. It must be set at 2021.

T/E FUSE #1

This alarm indicates that the fuse for Thermoelectric cooler #1 is open. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the TE #1 fuse on the 962-JG board.
3. Check the power going into the TCU.
4. Check the other fuses.
5. Check the wire crimps going into the TE1 SSR.

T/E FUSE #2

This alarm indicates that the fuse for Thermoelectric cooler #2 is open. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the TE #2 fuse located below the heat sink that holds the SSRs. Labels are on the wire insulation.
3. Check the power going into the TCU.
4. Check the other fuses.
5. Check the wire crimps going into the TE2 SSR.

T/E FUSE #3

This alarm indicates that the fuse for Thermoelectric cooler #3 is open. It deactivates the controller output.

To clear:

1. Disconnect the power cord.
2. Check the TE #3 fuse located below the heat sink that holds the SSRs. Labels are on the wire insulation.
3. Check the power going into the TCU.
4. Check the other fuses.
5. Check the wire crimps going into the TE3 SSR.

Master Relay Alarms



Danger

High voltage is active in the system. Safety covers provide protection for the user and the machine. If bypassed, only authorized and qualified personnel should repair or test the machine.

HEATER OVERTEMP

This alarm indicates an OPEN on the Heater thermal snap switch input. This is sensed by an OPEN on the H-OT input. The master relay is deactivated and the system goes into ALARM Mode.

To clear:

1. Disconnect the power cord.
2. Check the Molex connector at the H-OT on J16 on the 962-JG board.

4 Alarms

LL RESERVOIR

This alarm indicates a Low Liquid level condition in the reservoir. This is sensed by an OPEN on the LLR input terminal.

To clear:

1. Fill the tank with the specified process water.
2. Check for leaks.
3. Disconnect the power cord.
4. Check the 22AWG red wire crimps and the connectors for loose wiring.
5. Check the Molex connector at the LLR on J16 on the 962-JG board.
6. Check the 3-liquid level sensor on the tank

SAFETY COVER OFF

This alarm indicates an OPEN on the SP4 input terminal. The enclosure safety cover is not closed.

To clear:

1. Disconnect the power cord.
2. Check the Molex connector at the SP4 on J16 on the 962-JG board.
3. Check that the magnet is attached to the front panel cover.
4. Place a magnet on top of the switch and check for continuity.

T/E OVERTEMP

This alarm indicates an OPEN on the Thermoelectric snap switch input. This is sensed by an OPEN on the TEOT input.

To clear:

1. Check that the ACTIVE Mode temp is not above 50 °C.
2. Check the facility water for flow and check that the temperature is not above 25 °C.
3. Disconnect the power cord.
4. Check the snap disc.
5. Check the wires and crimps of the snap disc.
6. Be sure the T/E wires are not reversed.
7. Check the Molex connector at the T/E-OT on J16 on the 962-JG board.

4 Alarms

Optional Equipment

There are several options available with the Model 2021. They include the following:

- Remote Display
- Digital Flow Meter
- Liquid Pressure By-Pass
- Communication Interface

Remote Display

The 962-JE is a Remote Display that shows the same information displayed on the 962-JG controller interface. It provides both remote key and display functions. The Remote display communicates via a DB25 connection through an extension cable to the main controller. Once installed, both screens simultaneously display identical data and accept key functions from either display pad.

The Remote Display does NOT control any inputs or output but only receives display information from the 962-JG controller and sends key inputs to the 962-JG. The end user simply monitors and controls the TCU from another location.

The 962-JE board is mounted on the front, lower left-hand corner of the 2021 chassis. A 25-pin D-sub miniature connector receptacle is located in the back of the Model 2021. Refer to Figure 5-1. The user need only plug in a 25-pin straight D-sub mini connector between the 2021 TCU and the Remote Display. A 35-foot 25-pin

5 Optional Equipment

cable is preferable. (A longer cable might result in problems with visibility and clarity.)

When installing the cable the Model 2021 must be reset. To reset, turn the circuit breaker Off and then turn back On.


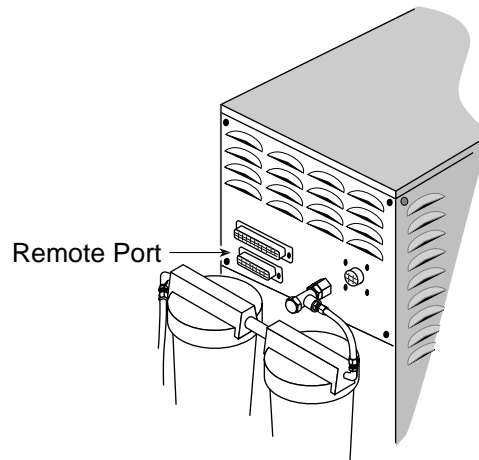


Figure 5 - 1 Remote Port

Digital Flow Meter

The Digital Flow Meter option is for processes that require an adjustable low flow alarm setting. The standard Model 2021 uses an inline flow sensor switch to monitor the process flow rate. Because the flow switch is set at 2.0 gpm, if the flow rate is less than 2.0 gpm, an alarm condition occurs which shuts off the temperature control operation. (The 2.0 gpm in-line flow switch is usually removed if the flow meter option is used.)

The RFO (Rotor Flow Output) type flow meter sends an on/off pulse that varies according to the frequency of flow. An input voltage from the communication interface board (962L) is required for this option. The active flow rate is displayed on the second line of the display screen. For example:

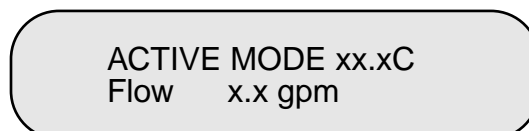

The Flow, Resistivity, and Setpoint readings cycle for time periods set in SETUP Mode. The RS232 must be set at 04 in the Factory Setup.

The Low flow alarm is adjustable from 0.0 to 12.0 gpm. This parameter is in User Setup. The 2021 pump is rated at 4.0 gpm so the maximum setting should not exceed 3.5 gpm.

Electrical:

Sensor	
+VDC	red
Ground	black
Signal out	white

Board: 962L

Pin	9	+ voltage supply, red
	10	In signal, white
	11	Ground, black

Calibration is performed at the factory before shipping.

Liquid Pressure By-Pass

The Liquid Pressure By-Pass option is normally used during a preventive maintenance session. Instead of shutting down the Model 2021, this option allows the TCU to recirculate the process fluid at set temperature. When the system is restarted and the equipment is ready to go back on-line, the TCU is already at temperature, thus minimizing stabilization time at start-up.

The Liquid Pressure By-Pass option is mounted externally on the back of the Model 2021. See Figure 5-2. (Refer to Figure D-4 for plumbing diagrams.) Using stainless steel components, the piping has a pressure by-pass set at 55 psi when it leaves the factory. This setting is not fixed; it can be adjusted by turning the set screw at the pressure valve to the required pressure. Piping includes a pressure gauge.

5 Optional Equipment

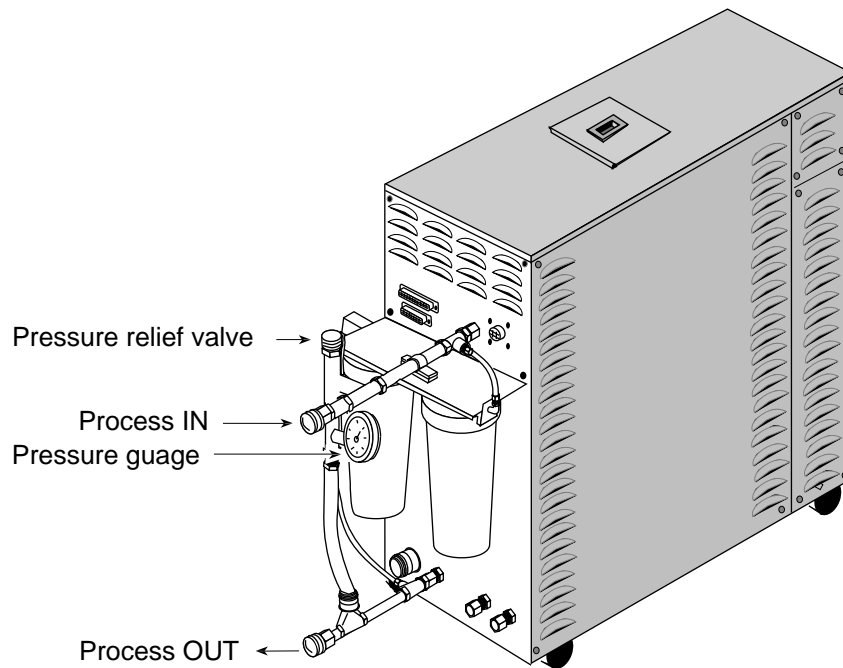


Figure 5 - 2 Liquid Pressure By-Pass

To adjust the pressure setting:

1. Remove both the cap screw (slotted head) and the lock-set screw (Hex head).
2. Turn the adjusting screw (Hex head) to change the pressure setting.
3. After setting the pressure, be careful to tighten the lock-set screw against the adjusting screw.



Note

Flow into the machine must be off to use the by-pass option.

Communication Interface

With the Model 2021 communication option, the user is not confined to the Model 2021 control panel for temperature adjustment. Temperature adjustment and temperature monitoring are controlled by the process equipment.

Several communication interfaces are available.

- 10 mV/ °C Analog Signal
- 100 mV/ °C Analog Signal
- 10 mV/ °C Analog Interface Special
- RS-422

10 mV/ °C Communications Interface

Temperature range: 0.0 °C to + 45.0 °C
 Voltage/Temperature: 0.10 volts = 10.0 °C

Port: 9-pin male circular plastic connector, size 13.
 Amp #206705-1. See Figure 5-3.

Pins

- | | |
|-------|---|
| 1 | TX. Transmits a DC voltage, across Pins 1 and 2, to the process equipment corresponding to the current temperature of the 2021 reservoir. |
| 2 | Common |
| 3 | RX. Receives the DC signal from the process equipment, across Pins 3 and 2, which corresponds to the Temperature setpoint to which the 2021 is set. |
| 4 & 5 | Flow switch. Closed contact between Pins 4 and 5 indicates that the process flow rate is at least 2.0 gpm. Open contact indicates a flow rate below 2.0 gpm and/or a loss of process flow. To use the internal flow switch, disconnect the flow switch and connect it to the com-port. |

5 Optional Equipment

At the same time, jumper the wires to the board to avoid the alarm for Low flow.

- 7 & 8 **Emergency Off.** Open contact indicates that the Model 2021 EMO button is pressed in.

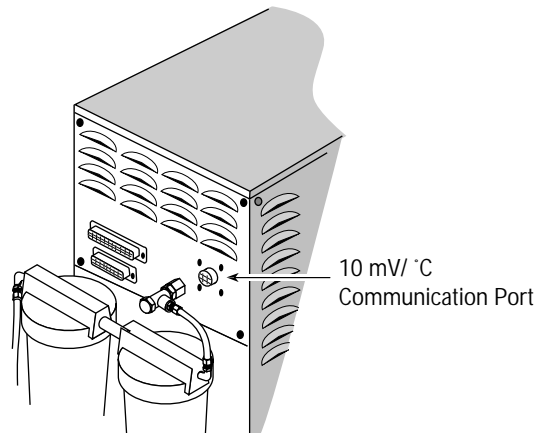


Figure 5 - 3 10 mV/ °C Analog Signal Communication Port

100 mV/ °C Communications Interface

Temperature range: 0.0 °C to +45.0 °C

Voltage/Temperature: 1.00 Volts = 10.0 °C

Port 1: 37-pin D-subminiature receptacle labeled 72J1.
See Figure 5-4.

Pins

20 & 1 **TX and Common Channel 1.** Transmit a DC voltage to the process equipment corresponding to the current temperature of the 2021 reservoir.

24 & 5 **RX and Common Channel 1.** Receives the DC signal from the process equipment which corresponds to the Temperature setpoint to which the 2021 is set.

- 26 & 7 **Hard Alarm.** Closed contact indicates that there is no alarm condition. Open contact indicates a hard alarm condition. A hard alarm condition means a fail condition which causes the 2021 to shut down.
- 28 & 9 **Soft Alarm.** Closed contact indicates that the 2021 is operating under normal conditions. Open contact indicates a soft alarm or warning condition. The 2021 is not totally shut down but will eventually shut down if the alarm is not cleared.

Port 2: 9-pin male circular, plastic connector, size 13, labeled 72J2. Amp #206705-1.

Pins

- 1 & 2 **Chiller EMO.** Open contact indicates that the Model 2021 EMO button is pressed in.
- 3 & 4 **Remote/Local Switch.** A 24 VAC signal from the etcher triggers a relay that activates the Remote interface. No voltage across Pins 3 and 4 switches the 2021 to Local operating mode.
- 5 & 6 **Etcher EMO.** Open contact indicates that the Etcher EMO switch is pressed in. Closed contact indicates a normal condition.



Note

For processes that go below 0.0 °C, contact Noah Precision. The communication/interface board can not analyze a negative (-) voltage input and/or output. Thus, it cannot go below 0.0 °C with the interface connected: an additional board is required. However, the Model 2021 can go below 0.0 °C in Local (manual) mode.

5 Optional Equipment

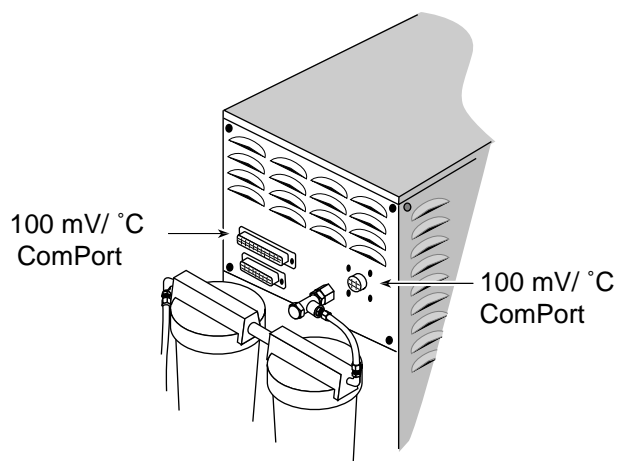


Figure 5 - 4 100 mV/ °C Analog Signal Communication Port

For Dual Channel Chiller only

Port 1: 37-pin D-sub miniature receptacle

Pins

21 & 2 **TX and Common Channel 2.** Transmit a DC voltage to the process equipment corresponding to the current temperature of the 2021 reservoir.

25 & 6 **RX and Common Channel 2.** Receive the DC signal from the process equipment which corresponds to the temperature setpoint to which the 2021 is set.

10 mV/ °C Analog Interface Special

Temperature range: 0.0 °C to 75.0 °C
Conversion: 0.010 VDC = 1.0 °C

Port: 9-pin circular plastic connector, Std, male, size 13
Noah Precision P/N 42-1547-000
AMP P/N 206705-1

Pins

- 1 TX. Temperature output.
- 2 Common.
- 3 RX. Temperature setpoint.
- 4 Hard alarm (+)
- 5 Hard alarm (Return). Closed contact between pins 4 and 5 indicates a normal operating condition. Open contact indicates a hard alarm condition. See Figure 5-1.
- 7 TCU EMO
- 8 TCU EMO. Closed contact between pins 7 and 8 indicates a normal operating condition. Open contact indicates an emergency off condition.
- 6 Soft alarm (+)
- 9 Soft alarm (Return). Closed contact between pins 6 and 9 indicates a normal operation condition. Open contact indicates a soft alarm condition. See Figure 5-5.

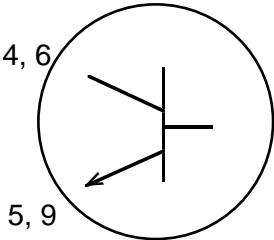


Figure 5 - 5 Transistor Output

5 Optional Equipment

RS-422 Communication Interface

The RS-422 communications interface uses a standard RS-422 connection with multi-drop capability. It is a serial link with direct access to FLOW and RESISTIVITY values via a READ Command. Connection is through any standard terminal or computer system with an RS-422 port. The link is fixed at 8 bit, 1 stop and 1 start bit, no parity, requiring 5 leads to function.

The internal ACIA uses a full duplex interrupt driven transmission scheme. The unit can receive and transmit simultaneously while continuing to perform normal functions. Baud rate is set at 9600 baud.

All commands must be prefixed by a channel selection indicator that corresponds to the identification number programmed into the controller with a 4-bit switch. This ID number differentiates between controllers in a multi-drop system. The following format indicates Channel selection:

CXX

C indicates that the following information is the Identification number of the device receiving commands.

XX is the Identification number, any number from 00 to 15.



Note

Channels are set via a dip switch on the RS-422 board. Refer to Appendix E for diagram.

The protocol for the serial link consists of the following two basic commands:

R (for Read)

W (for Write)

Data format is standard ASCII and all data are decimal values.

READ Command

Format for the Read command is

CXXR32 (Return)

C indicates that the channel Identification number follows.
XX is the Identification number.
R indicates a READ command
32 (two numbers) indicate the information to be read.

The carriage return activates the command.

Data locations

32	Resistivity
33	Flow in gpm

Data is returned in ASCII format with decimal values. If the controller displays information in tenths, the information is transmitted in tenths.

WRITE Command

The Write command overwrites the information in the programming stack.

Format for the Write command is

CXXW3601 (Return)

C indicates that the channel Identification number follows.
XX is the Identification number.
W indicates a WRITE command
36 (two numbers) indicate the location .
01 (two numbers) indicate the data value to be written

The carriage return activates the command. Data is returned in ASCII format with decimal values.

5 Optional Equipment

Data locations

36 Local/Remote

Local/remote locks out WRITE commands when '01' is written to Location 36. To enable WRITE commands again, a '00' must be written to Location 36.

A 25-pin D-sub mini receptacle is provided at the back of the unit labeled RS-422. See Figure 5-6 for a rear view of the TCU. Plug a standard RS422 cable into this port observing the following guideline:

Pin out:	Pin	2	TD (+) from TCU
		24	TX (-)
		3	RD (+) to TCU
		23	RD (-)
		7	Signal ground

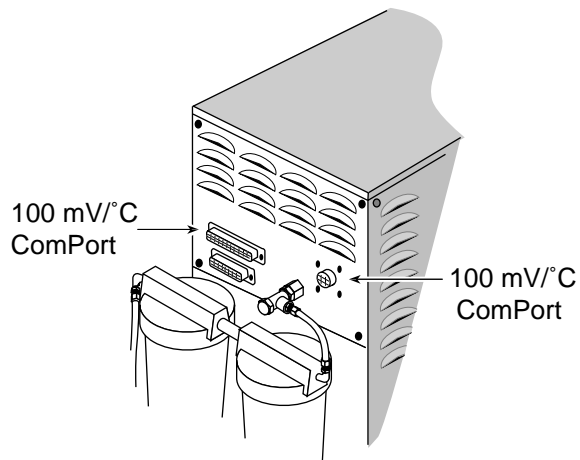


Figure 5 - 6 RS422 Port

Troubleshooting

This section discusses the following topics to help troubleshoot any problems that might occur when operating the Model 2021. Refer to Appendix E for electrical circuitry. A troubleshooting guide is provided at the end of the chapter. If following these procedures does not solve the problem, please do not hesitate to call Noah Precision.

- LEDs
- Master relay safety switches
- Fuses
- Temperature inputs
- Open collector transistor inputs
- System outputs
- Backdoor
- Auto tuning

LEDs

There are two LEDs on the face panel. The Heat LED indicates that the heater output is active and the Cool LED indicates that the thermoelectric output is active.

6 Troubleshooting

There are nine LEDs on the main circuit board. These provide a quick scan of active channels.

PWR (5VDC)	5 VDC power supply is On
PWR (12VDC)	12 VDC power supply is On
SRLY	Master relay is active
HT	Heat output to the SSR is active
PMP	Pump output to the SSR is active
T/E	Thermoelectric output to the SSR is active
A1	T/E 2 (AUX #1) output is active
A2	T/E 3 (AUX #2) output is active
EA	2nd heater output is active

Master Relay Safety Switches

The Model 2021 has four inputs for safety switches that shut off the master relay. These inputs have the following markings on the circuit board:

H-OT	Heater overtemperature
TEOT	Thermoelectric overtemperature
LLR	Low level reservoir
SP4	Safety cover off

They are normally closed switches wired in series with the power supply for the coil of the board master relay.

Each input is monitored via an opto-coupler. If the switch opens, it turns off the master relay and alerts the microprocessor. An alarm appears on the controller display.

If more than one of these safety switches is open, the microprocessor announces the most significant OPEN. Once that OPEN is closed, the next significant OPEN is displayed.

Fuses

The Model 2021 can monitor up to five fuses. Opto-couplers detect the voltage on the secondary sides of the fuses. This is a diagnostic feature so they do not affect other system functions. These inputs have the following markings on the circuit board:

Heater	Heater fuse
Pump	Pump fuse

These inputs have the following markings on the cable:

T/E	Thermoelectric fuse #1
TE2	Thermoelectric fuse #2
TE3	Thermoelectric fuse #3
Heater	Heater
Pump	Pump

The system monitors these fuses only when the master relay is active. If a fuse blows and the master relay is inactive, the condition is not detected by the circuitry.

The main fuse for the circuit board is not monitored. If it blows the circuit board loses power. A Power LED on the main controller board is always on when the unit has power. A quick glance at the Power LED can determine if the circuit board has power or not.

Standard Temperature Inputs

The Model 2021 has two pre-defined temperature inputs: the Process sensor and the Overtemp sensor.

The **Process sensor** is the main temperature sensor feeding the 3-mode control loop. It can be either a Type-J thermocouple or a 3-wire, 100 ohm, 0.00385, platinum RTD. Only one input sensor is used at a time. A DIP switch on the circuit board selects either the thermocouple or RTD sensor. RTD is standard.

6 Troubleshooting



Note

The Sensor Type parameter in the Factory Setup must be set to the correct sensor, either T/C or RTD.

Open Collector Transistor Inputs

There are seven additional inputs which all accept switch closure or open collector transistor input. An Open condition is interpreted as an alarm condition. These inputs have the following markings on the circuit board:

LFP	Low flow Pump
LFC	Low flow House water
LLT	Low level Tank
T-OT	Tank overtemp
S-OT	SSR overtemp
SP3	Spare #3
SP5	Needs fluid added

System Outputs

The Model 2021 has six outputs. These are optically isolated open collector transistor drives rated at 500 mW, 12 VDC. Each has a 12 VDC supply on board and each has an individual LED on the circuit board to show when each output is on.

These output channels have the following markings on the circuit board.

HT	Heater
PMP	Pump motor
T/E	Thermoelectric cooler #1
A1	Thermoelectric cooler #2

A2 Thermoelectric cooler #3
EA 2nd heater

The **Heater output** controls the electric heating SSRs. The heaters act as the control elements in the system. They cycle on and off to provide required temperature control. Cycling is based on the output of the PID algorithm.

The **Pump Motor output** is a general purpose binary output that is turned on when the system is in ACTIVE Mode. It typically drives an SSR that controls a pump motor.

The **Thermoelectric Cooler #1** output runs thermoelectric cooler #1. It drives the first chiller stage and goes ON when cooling demand calls for one or more stages. This output can be disabled for high temperature applications by setting the Cooling parameter in the Factory Setup to NO.

A 1.0 °C hysteresis prevents fluctuation when the system is turned on. Cooling starts at PS-CD but turns off at PS-CD-1.0

The **Thermoelectric Cooler #2 output** uses AUX #1 to run thermoelectric cooler #2. It drives the second chiller stage and is ON when cooling demand calls for two or more stages. This output can be disabled for high temperature applications by setting the Cooling parameter in the Factory Setup to NO.

The **Flow output** uses AUX #1. The Low flow is compared to the flow reading from the 962-JG. AUX #1 output is active when the flow reading is higher than the Low flow. If the flow reading falls below the Low flow AUX #1 is inactive.

The **Thermoelectric Cooler #3** output uses AUX #2 to run thermoelectric cooler #3. It drives the third chiller stage and is ON when cooling demand calls for all three stages. This output can be disabled for high temperature applications by setting the Cooling parameter in the Factory Setup to NO.

The **2nd heater output** controls the second heater SSRs. Output is activated at the same time as the heater output and is activated only when the process setpoint is set at ≥ 40 °C.

6 Troubleshooting

Back Door

A special code has been incorporated into the software so that user functions can be accessed no matter what the customer has done with the access codes. This code is 222.

AutoTuning

The system can automatically tune the PID parameters of the unit to fit the specific requirements of a given system. This procedure takes up to ninety minutes depending on system configuration.

1. Set Setpoint and Cycle rate parameters before activating AutoTune.


To activate AutoTune

2. Enter User Setup and change the AutoTune parameter to YES.
3. Press the RETURN key to exit the SETUP Mode.
4. If the system is in IDLE Mode, press the Start key. If the system is in ACTIVE Mode, it automatically starts AutoTune.

The system runs a test sequence to determine basic system characteristics, then calculates the appropriate tuning values and automatically inserts them into the Prop Band, Reset and Rate parameters. When AutoTune is completed, the system returns to ACTIVE Mode.

To cancel AutoTune with no effect on previous tuning parameters, press the Stop Key or enter the SETUP Mode and change the AutoTune parameter back to NO.

Troubleshooting Guide

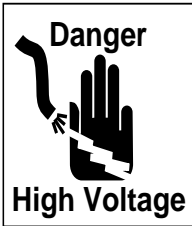

Danger

High voltage is active in the system. Safety covers provide protection for the user and the machine. If bypassed, only authorized and qualified personnel should repair or test the machine.

Problem	Possible Cause	Possible Solution
Unit does not start	1 Now power to the unit	1 Check power cord and power outlet.
	2 EMO button is latched	2 Check emergency button. Turn to reset.
	3 Fuse is blown	3 Cisconnect the power cord. Check the fuses.

6 Troubleshooting

Problem	Possible Cause	Possible Solution
Circuit breaker is on but display is not active	1 Loose ribbon cable	1 Disconnect power cord. Check ribbon cable
	2 No power to the main board	2 Check connection J19 on the 962-JG board.
	3 Fuse is blown	3 Disconnect power cord. Check the fuses.
Pump does not start when unit is on	1 Pump fuse is blown	1 Disconnect the power cord. Check pump fuse.
	2 SSR is defective	2 Check pump SSR. Replace if necessary.
Circuit breaker trips repeatedly	1 Power cord is not wired correctly.	1 Check the plug phases.
	2 Fuse is blown	2 Disconnect the power cord. Check fuses.
	3 Shorted SSRs	3 Check SSRs and replace if necessary.
	4 Shorted diode bridge	4 Check diode bridge and replace if necessary.
Safety cover is active	1 Front panel cover is open.	1 Disconnect power cord. Close cover.
	2 Magnet switch is defective.	2 Disconnect power cord.
	3 Loose wiring a SP4.	3 Check the SP4 wiring on the J6 Molex connector (962-JG).

Problem	Possible Cause	Possible Solution
T/E fuse is active	1 T/E fuse is blown	1 Disconnect power cord. Check all the T/E fuses.
	2 Shorted T/E SSRs	2 check the SSRs. Replace if necessary.
	3 Shorted diode bridge	
	4 Capacitors are not wired correctly	3 Check diode bridges.
	5 T/E bank is grounded or open	4 Check the capacitors. 5 Check for a loose connection on the board and the thermoelectric unit.
Heater fuse is active	1 Heater fuse is blown	1 Disconnect power cord. Check heater fuses.
	2 Loose wiring or connectors	2 Check connectors for loose wiring or loose contact.
	3 Heater is open or worn out	3 Check the heater for shorts or opens by measuring the resistance of each leg.
Low flow facilities are active	1 Facility plumbing is reversed	1 Check the facility plumbing connection for proper orientation of the Facility IN and OUT lines.
	2 Not enough flow rate	2 Check the flow sensor. There must be 2.0 gpm.
	3 Filter is clogged	3 Check filter.

6 Troubleshooting

Problem	Possible Cause	Possible Solution
Low flow pump	1 Process line is frozen	1 Check the process flow sensor.
	2 Defective flow sensor	2 Check flow sensor and check for contact.
	3 Loose wire at LFP port	3 Disconnect power cord. Check LFP connection.
	4 Pump failure	4 Check for power. Replace if necessary.
The 2021 does not hold temperature	1 PID parameters are not set correctly	1 Adjust PID parameters to compensate.
	2 Defective heater or T/Es	2 Disconnect power cord. Check the heater; replace if necessary. Check T/Es.
	3 Defective SSRs	3 Check SSRs. Replace if necessary.
Software communication does not work	1 RS422 switch not set correctly	1 Refer to Appendix E for correct DIP switch settings.
	2 Loose wiring	2 Disconnect power cord. Check the pin connection for the 9-pin connector and the 37-pin connector.
	3 Defective interface board	3 Check and replace if necessary.

Problem	Possible Cause	Possible Solution
AutoTune does not work	<p>1 Autotune calculations take several minutes.</p> <p>2 Autotune was not set during ACTIVE Mode or software parameters were not set properly.</p>	<p>1 Wait. Autotune takes 15 to 60 minutes to finish.</p> <p>2a Check the Setpoint. It must be between 10 °C and 40 °C.</p> <p>2b Check the Active temperature. It must be within 2 °C of the setpoint.</p> <p>2c Set the Prop Band parameter to 1.2 °C, the Reset parameter to 1.7 minutes, and the Rate parameter to 0.9 minutes.</p>
Low temp alarm turns on repeatedly	<p>1 Low temp alarm is set too low</p> <p>2 Heater inoperative</p>	<p>1 Adjust the Low temp alarm to at least 2.5 °C below the Setpoint. If the cooling and heating lights are on, reset the TCU by turning it Off. Wait at least 10 seconds, then turn back On.</p> <p>2 Disconnect power cord. Check the heater fuses, heater SSR, and the heater itself.</p>

6 Troubleshooting

Maintenance

The Model 2021 requires minimal maintenance; however, the process fluid must be changed periodically and moving parts do wear out. Replace the process fluid every two years, or every time the TCU is inoperative (allow six months' usage). The only moving parts, the pump and motor, must also be replaced every two years as bearings and couplings undergo continuous cycling.

The following parts should also be checked:


Fuses

SSRs

Diode bridge rectifiers

Crimps and connectors.

DI cartridges (change when resistivity is below 3.0 Mohm/cm)

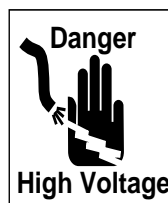

Danger

High voltage is active in the system. Safety covers provide protection for the user and the machine. If bypassed, only authorized and qualified personnel should repair or test the machine.

7 Maintenance

Process Fluid

Always check for leaks.

The process fluid (deionized water / Ethylene glycol) must be replaced every two years or every time the TCU is down (allow six months' usage). Replace the DI cartridges when the resistivity reads below 2.0 Mohm-cm.

Procedure:

1. Remove the left side panel
2. Drain the fluid by using the ball valve.



Warning

Ethylene glycol is a hazardous chemical and must be disposed of properly.

3. Remove and replace the DI cartridges.
4. Refill with a new process fluid mixture.

Pump

Because the bearings and coupling undergo continuous cycling, the motor and pump must be replaced every two years.

To replace the pump, use the following procedure.

1. Disconnect the main AC supply
2. Drain the system.
3. Remove the DI cartridges.

4. Remove the DI cartridge bracket and the center rear panel.
5. Remove the right side panel.
6. Remove the two compression fittings.
7. Unplug the 3-pin connector from the motor.
8. Remove the four 1/4-20 bolts.
9. Remove the pump.
10. Disconnect the two hot wires and ground wire from the motor.
11. Rewire the two hot wires to the new motor.
12. Replace the bolts and tighten.
13. Replace the compression fittings.
14. Replace the center rear panel and the DI cartridges.
15. Replace the right side panel.
16. Refill with new coolant.

7 Maintenance

Engineering Specifications for the Model 2021

Overall dimensions:	Length: 31 inches with filters 26 inches w/o filters
	Width: 14 inches with filters 11 1/2 inches w/o filters
	Height: 27 inches
Weight:	140 lbs.
Tank capacity:	4.5 gallons (19.8 liters)
Materials:	Steel chassis Stainless steel tank Teflon & Buna-N plumbing
Temperature range:	0.0 °C to 88 °C
Cooling power:	2200 watts or 11,942 BTU/hr. at 20 °C
Circulating liquid:	Mixture of 50% Ethylene glycol and 50% deionized water OR Fluorinert OR Galden
Pump:	Regenerative turbine pump 4.0 gpm @ 60 psi, 0.5 hp electric motor
Inlet/outlet tube fittings:	1/2 in. FNPT
Controller:	962-JG microprocessor controller resolution of 0.1 °C
Electrical:	208 volts, 60 Hz, three phase Delta, 5-wire, 30 amp service, 10 ft. (3.1 meter) grounded power cord

Protection:

Overcurrent :	Pump:	2 fuses 10 amp
	T/E 1	2 fuses 10 amp
	T/E 2	2 fuses 10 amp
	Heater:	4 fuses 15 amp
	Controller:	1 fuse 0.5 amp

Liquid Flow: Facility cooling loop flow sensor
Process cooling loop flow sensor

Thermal overload: Snap disc on heat exchanger

Model 2021

Major Components

Part Number	Part Description	Quantity
30-2275-230	Tank, stainless steel	1
42-2474-000	Heater, stainless, 208V, 2000W	1
42-2627-010	2021 thermoelectric module, 2 stage	1
42-2781-000	Controller, 962-JG	1
42-2780-000	Controller board, resistivity monitor (220V)	1
40-1590-000	DI filter cartridge, 10"	2
40-2718-000	Pump, Regenerative, 4 gpm w/ motor	1
42-0425-000	Relay, mercury, 2 pole	1
42-2782-000	Transformer, 24 VAC, 220V	1
42-2388-000	Button, emergency machine off (EMO)	1
42-2031-240	Cable, ribbon, 26-pin, 24" long	1
42-2659-010	Contactactor, mechanical, 40a, 208V	1
42-1370-010	Fuse, 10 Amp (pump)	2
42-1370-020	Fuse, 15 Amp (heater)	4
42-1156-010	Rectifier, diode, metal housing, 35 amp, 600V	2
42-0791-250	Relay, solid state (SSR), 25 amp	3
42-1964-000	Resistor	2
42-2001-010	Sensor, RTD, probe resistivity	1
42-1513-030	Sensor, RTD probe temperature	1
42-2368-000	Switch flow, in-line 2 gpm	2
42-2413-000	Switch, 3 stage, float (liquid level, add, full)	1
42-2265-000	Switch, circuit breaker, 30 amp, 250V	1
50-2126-020	Valve, drain ball, stainless	1
30-2067-200	Bypass valve assembly (optional)	1
42-2498-000	Relay, SPDT, 24 VAC (100 mV/ °C option only)	1
42-2784-000	Relay, dual 240V, 25 amp	2
42-2790-010	Communication board, 962-LH-529, 220V RS-422	1

B

Engineering Specifications for the 962-JG Controller

Range (Temperature):	-5.0 to 95.0 °C	
Resolution (Temperature):	0.1°C	
Noise Rejection:	NMR	60 db @ 60 Hz
	CMR	120 db @ 60 Hz
Measuring Time:	4 Conversions per second	
Display:	Two discrete LEDs (red and green) Alpha numeric display 2 x 20, LCD Backlit, .2 in. characters	
Annunciator:	Audio tone, ~ 2500 Hz	
Setup Memory:	EEPROM, All parameters	
Memory Retention:	10 Years w/o power	
Sensor:	Standard: Type J thermocouple Cold junction compensation Up scale break protection or RTD or 100 ohm platinum (.00385)	
Control:	PID with anti-reset windup	
Adjustment:	Cycle rate:	1 - 25 sec.
	Proportional band:	0.0 - 25.0° C
	Reset (Integral):	0.0 - 25.0 min.
	Rate (Derivative):	0.0 - 25.0 min.
	Calibration offset:	± 9.9°C

C

Operation Range:	0 to 50°C, 90% RH, Non condensing MAX
Storage Range:	-40 to 60°C, 90% RH, Non condensing MAX
Construction:	Open board
Size:	Display panel: 3 x 7 x 2 in. (H x W x L) 25 x 177 x 50 mm. Control card: 6 x 9 x 2 1/2 in. (H x W x L) 152 x 228 x 51 mm.
Weight:	< 3 lbs. (1.8 kg)
Connection:	Thermocouple: 6-32 screw I/O wiring: .156 cc Molex, .045 sq. pin Control board to display: IDC w/locking ears Power wiring: amp universal mate'n'lock
Output:	500 mw., 12C VDC
Power:	15 VA, 220 VAC, 50/60 Hz Board only 16.5 amp, 220 AC, 50/60 Hz Max power load

Process Plumbing

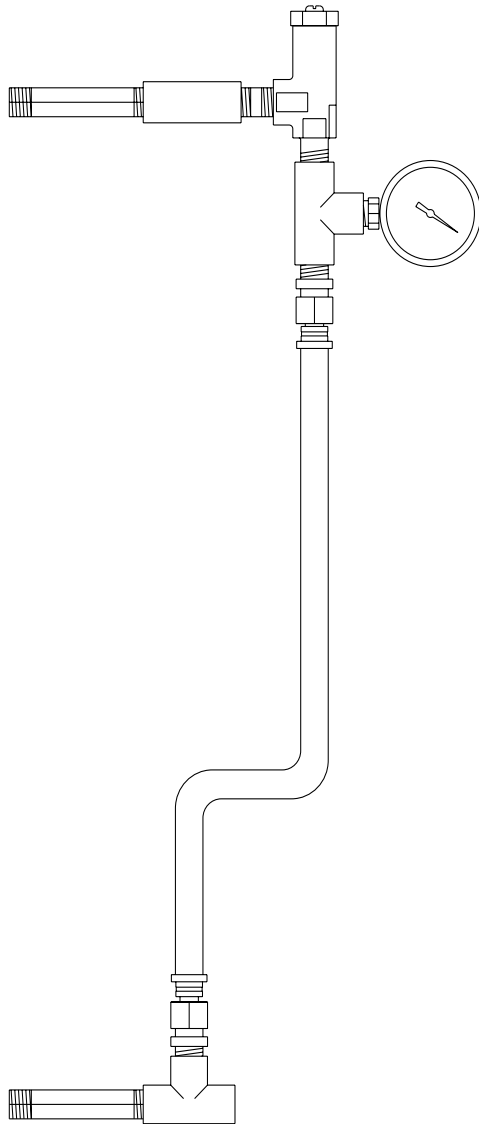


Figure D - 1 Liquid By-Pass

 
D

Electrical Circuitry


E

Circuit Markings on the 962-JG Board


J5 Input Connector

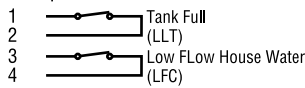


J6 Input Connector

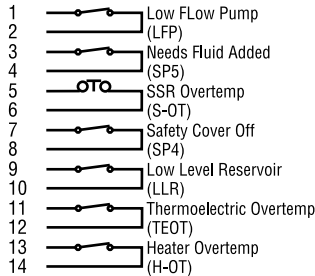


J7 Hi-Limit Connector

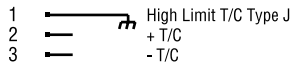 


J8 Input Connector

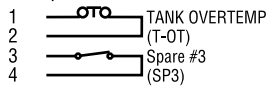 


J9 Connector

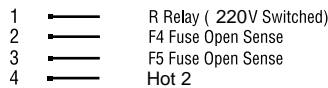 


J10 Power Connector

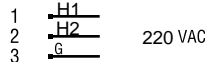 

J11 SSR Connector

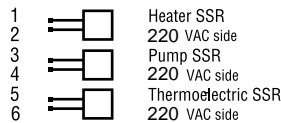


J12 Heater Connector

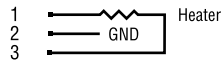 


J13 Pump Connector



 
J14 Thermoelectric Connector

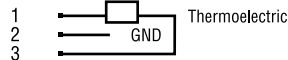


J15 Resistivity Connector

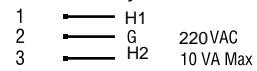 


J17 Output Connector

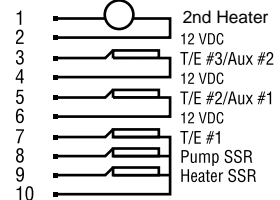



J18 Thermocouple or RTD Connector

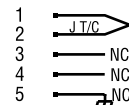 

J18 Thermocouple or RTD Connector

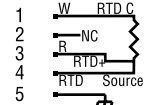 

J19 Resistivity Connector

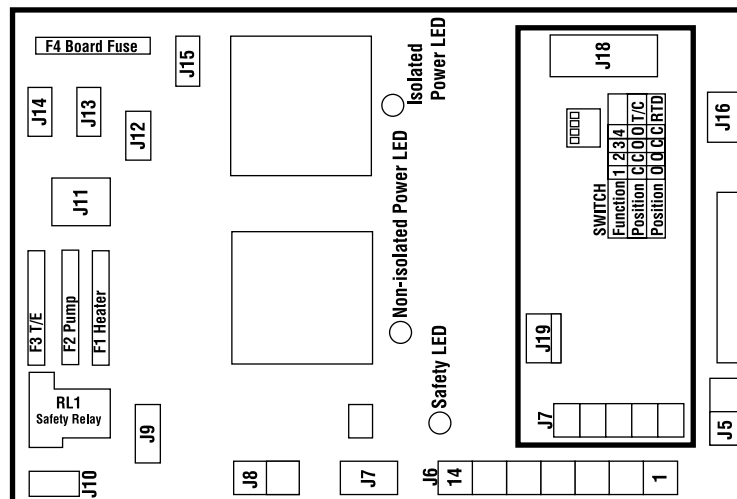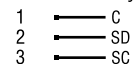 

Acronyms

The following acronyms are used in this document.

AWG	American Wire Gage
BTU	British Thermal Unit
° C	Degrees Celsius
CVD	Chemical Vapor Deposition
db	Decibels
EEPROM	Electrically Erasable Programmable Read-Only Memory
EMO	Emergency Machine Off
FNPT	Female National Pipe Thread
GFI	Ground Fault Interrupt
GPM	Gallons Per Minute
Hz	Hertz
LCD	Liquid Crystal Display
LFC	Low Flow Facility Water
LFP	Low Flow Pump
LED	Light Emitting Diode
NPT	National Pipe Thread
ODC	Ozone Depleting Chemical
PID	Proportional Integral Derivative
PSI	Pounds per Square Inch
RAM	Random Access Memory
RTD	Resistance Temperature Detector
SSR	Solid State Relay
T/C	Thermocouple
TCU	Temperature Control Unit
T/E	Thermoelectrics
VAC	Volts Alternating Current
VDC	Volts Direct Current

G
